



## DRIVER INSTALLATION INSTRUCTIONS

RAZER BLADE STEALTH 13 (2019) INTEL DYNAMIC PLATFORM AND  
THERMAL FRAMEWORK DRIVER VERSION 8.5.10100.6838

---

## DRIVER INSTALLATION INSTRUCTIONS

### APPLICABLE MODEL NUMBERS

- RZ09-02812
- RZ09-02810

### DRIVER NAME AND VERSION

Intel Dynamic Platform and Thermal Framework Driver version 8.5.10100.6838

### INSTRUCTIONS

**Note:** This download is for the original driver that was installed on your Razer Blade Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

- Ensure your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- Please save any open documents on your computer and close all other programs before attempting this update
- Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choosing (such as your desktop) to locate the files for the installation process.


<http://rZR.to/VZQKZ>

- Once you have extracted the file proceed to the installation steps below.


---

## INSTALLATION PROCESS


1. To initiate the install process, click on the setup.exe (Application) as shown in the image below:

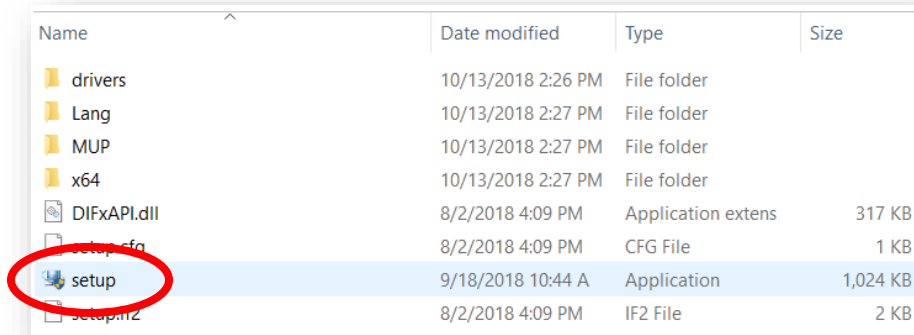

2. You will be prompted to confirm these changes through the User Account Control message that will then appear on your screen. Click 'Yes' to confirm, and Intel® Dynamic Platform and Thermal Framework setup will appear. Click 'Next' as shown in the image below:

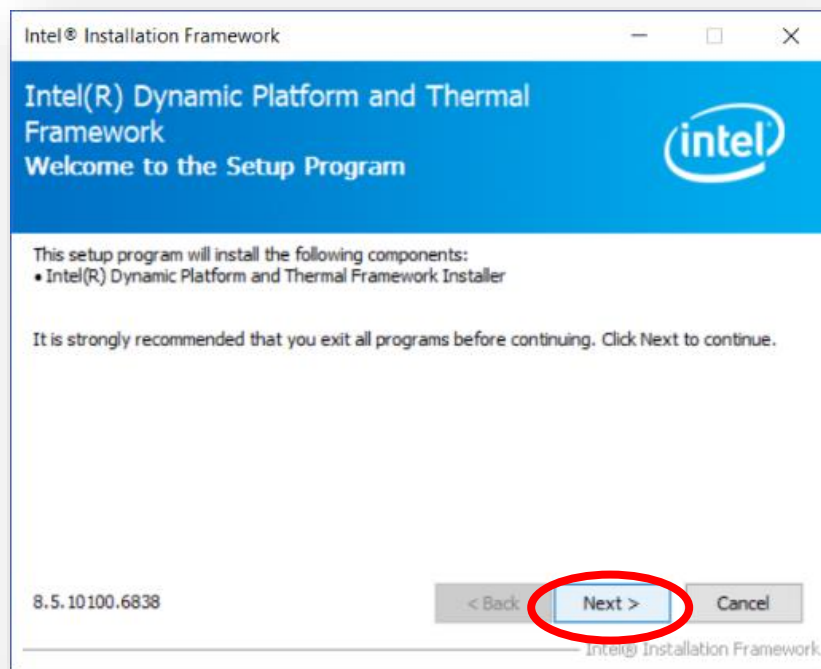

3. Click through the remaining prompts and follow the on-screen instructions. Once complete, click 'Finish' as shown in the image below: e

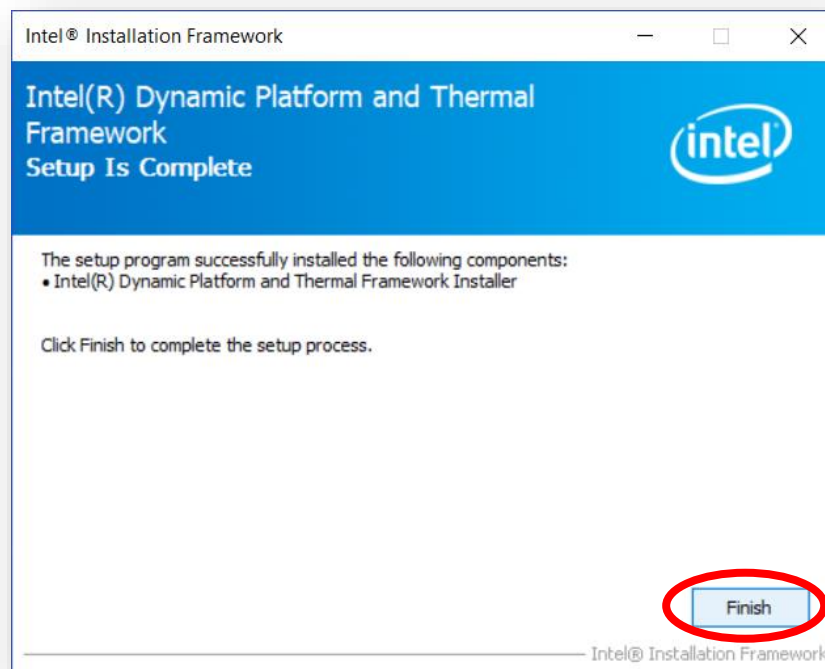

4. End