



## DRIVER INSTALLATION INSTRUCTIONS

RAZER BLADE STEALTH 13 (2019) REALTEK ALC298-CG DRIVER  
VERSION 6.0.1.8625

---

# DRIVER INSTALLATION INSTRUCTIONS

## APPLICABLE MODEL NUMBERS

- RZ09-02812
- RZ09-02810

## DRIVER NAME AND VERSION

Realtek ALC298-CG Driver version 6.0.1.8625

## INSTRUCTIONS

**Note:** This download is for the original driver that was installed on your Razer Blade Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

- Ensure your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- Please save any open documents on your computer and close all other programs before attempting this update
- Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choosing (such as your desktop) to locate the files for the installation process.


<http://rZR.to/CDFRC>

- Once you have extracted the file proceed to the installation steps below.

---


## INSTALLATION PROCESS

1. To initiate the install process, click on the InstallPackage.bat (Windows Batch File) as shown in the image below:

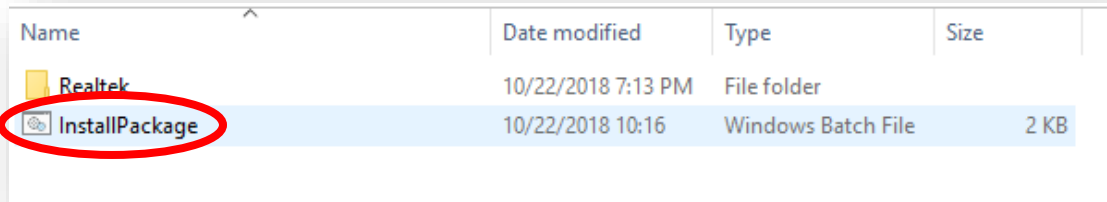

**NOTE:** This driver is required to install the Realtek Audio ALC298 Application.

2. Upon clicking the InstallPackage.bat (Window Batch File), you will be met with a Windows Terminal Shell window (as shown in the image below). Changes will be made within this window, until you are instructed to press any key to continue. Press any key as instructed, and the installation will be complete.

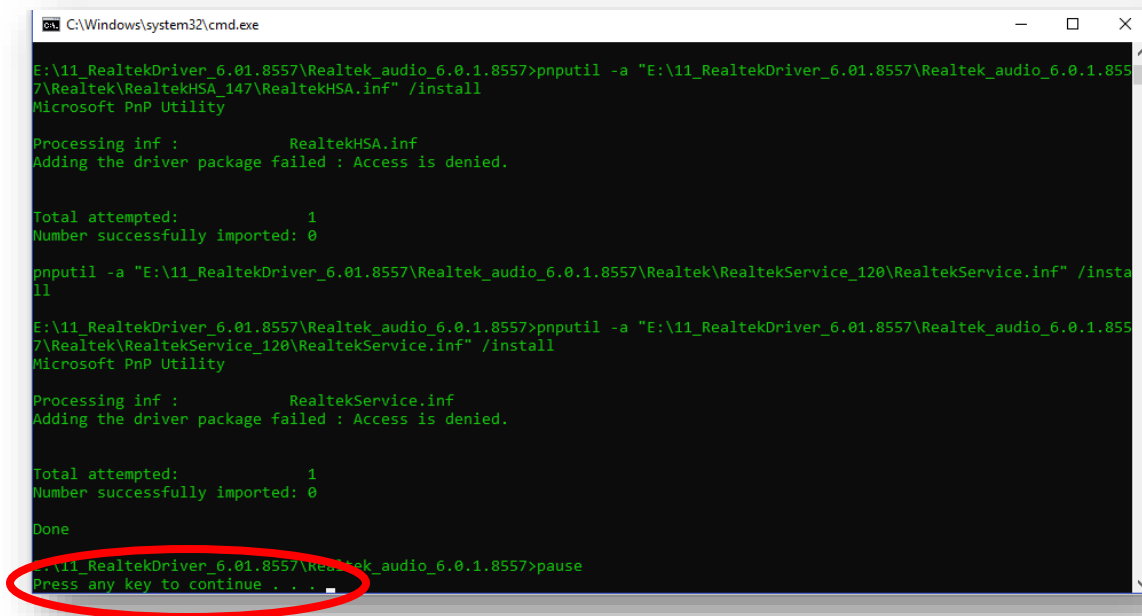

```
C:\Windows\system32\cmd.exe
E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557>pnputil -a "E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557\Realtek\RealtekHSA_147\RealtekHSA.inf" /install
Microsoft PnP Utility

Processing inf :          RealtekHSA.inf
Adding the driver package failed : Access is denied.

Total attempted:          1
Number successfully imported: 0

pnputil -a "E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557\Realtek\RealtekService_120\RealtekService.inf" /install
E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557>pnputil -a "E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557\Realtek\RealtekService_120\RealtekService.inf" /install
Microsoft PnP Utility

Processing inf :          RealtekService.inf
Adding the driver package failed : Access is denied.

Total attempted:          1
Number successfully imported: 0

Done
E:\11_RealtekDriver_6.01.8557\Realtek_audio_6.0.1.8557>pause
Press any key to continue . . .
```

3. End