

Designed for Gamers, the Razer Blade Stealth sets the new standard for ultra-mobility and extreme performance. The incredibly thin 0.52" CNC aluminum chassis encases an Intel® Core™ i7 processor, PCIe SSD, and the most visually stunning 13.3" high-resolution touch display. Never before seen in a notebook, the full-spectrum individually-lit Chroma keyboard enables unique personalization. The Razer Blade Stealth packs a full array of connectivity including Thunderbolt™ 3 (USB-C), 2x USB 3.0, HDMI, Bluetooth, and Wireless-AC for superior speed. For extreme performance, the Razer Blade Stealth fuses seamlessly with the optional Razer Core via Thunderbolt 3, delivering desktop graphics and expanded connectivity.

CONTENTS


1. PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT	3
2. BASIC FEATURES	5
3. SETTING UP YOUR RAZER BLADE STEALTH	1
4. USING YOUR RAZER BLADE STEALTH	6
5. CONFIGURING YOUR RAZER BLADE STEALTH	7
6. SAFETY AND MAINTENANCE.....	34
7. LEGALESE.....	36

1. PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT

PACKAGE CONTENTS

- Razer Blade Stealth 13.3" laptop
- USB-C power adapter
- Micro-fiber cleaning cloth
- Important Product Information Guide

REGISTRATION

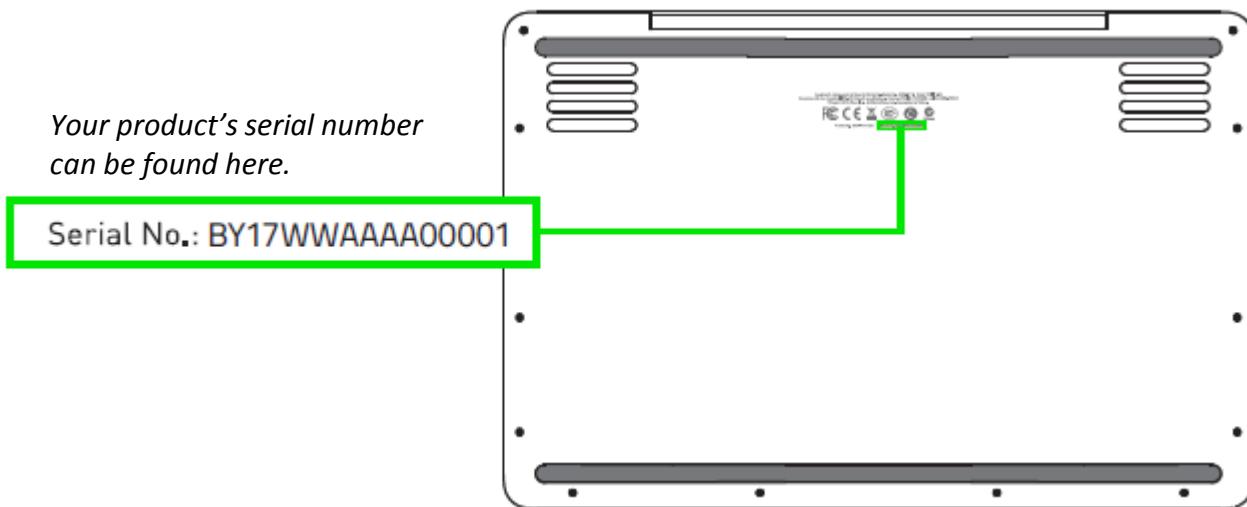

Visit razerzone.com/razer-id to sign up for a Razer ID now to get a wide range of Razer benefits. For example, get real-time information on your product's warranty status via Razer Synapse. To learn more about Razer Synapse and all its features, visit razerzone.com/synapse.

If you already have a Razer ID, register your product by clicking on your email address within the Razer Synapse application and select Warranty Status from the dropdown list.

To register your product online, visit razerzone.com/registration. Please note that you will not be able to view your warranty status if you register via the website.

TECHNICAL SUPPORT

What you'll get:


- 1 year limited manufacturer's warranty.
- 1 year limited battery warranty.
- Access to manual and free online technical support at razersupport.com.

For further assistance, contact us:

Country	Phone	Email
Australia	1800-172937	
Canada / US	1-855-87-25233 (BLADE)	
Dubai	971-4-388-33-71	
Korea	798-8523-8003	
Malaysia	1800-8872937	
Philippines	1800-18530041	
Singapore	800-601-1456	
Taiwan	809 093 203	
Thailand	+66 2018 2411	
International	1-760-448-8997	razersupport.com/contact-us

Other support options are also available by visiting razersupport.com.

2. BASIC FEATURES

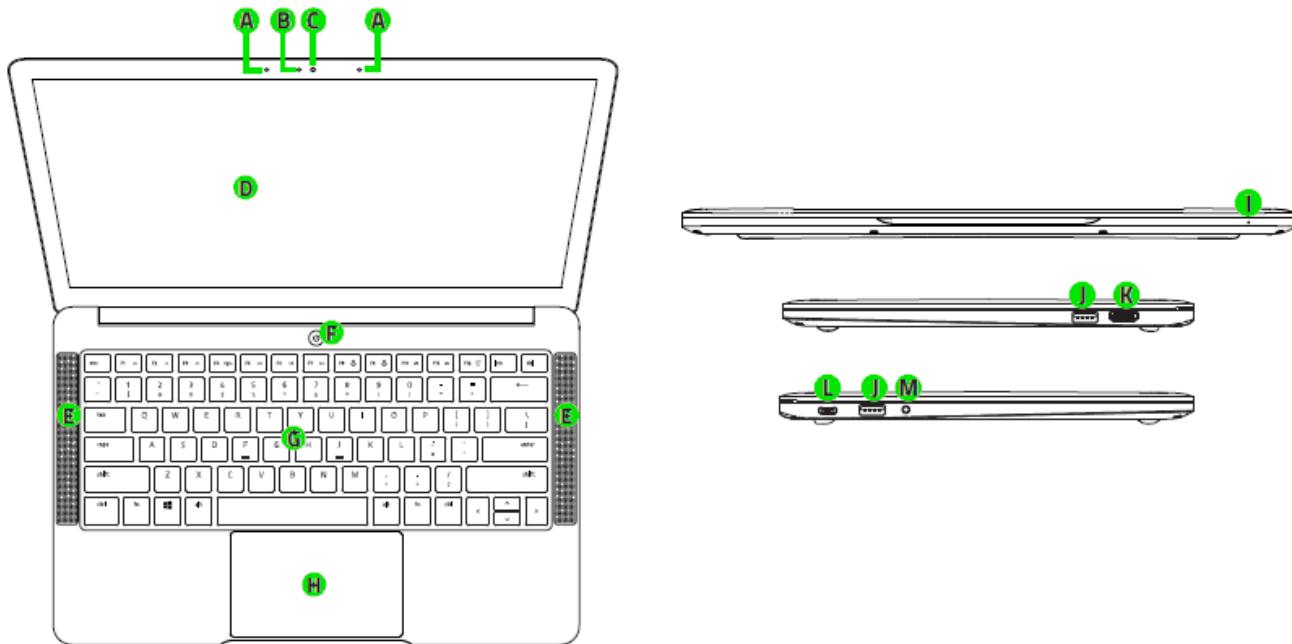


- A. Array Microphone
- B. Webcam Indicator Light
- C. 720P webcam
- D. 13.3-inch QHD+ touch display
- E. Stereo speakers incorporating Dolby® Digital Plus Home Theater Edition
- F. Power Button


- G. Anti-ghosting keyboard with Razer Chroma™ backlighting
- H. Multi-touch trackpad
- I. Front LED power indicator
- J. 2x USB 3.0 ports
- K. HDMI 2.0 Port
- L. Power Port / Thunderbolt™ 3 (USB-C) port
- M. 3.5mm Combo Port

3. SETTING UP YOUR RAZER BLADE STEALTH

Connect the Power Adapter as follows:

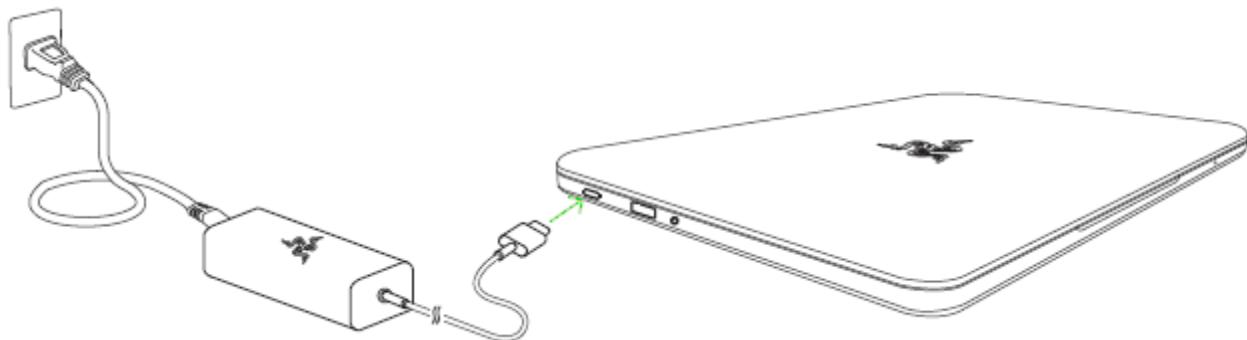

Make sure that the AC plug is properly inserted into the power outlet and the power adapter. An indicator will light up to show that the adapter is receiving appropriate power. Insert the power adapter's USB-C connector into the Razer Blade Stealth's power port. Press the power button to turn on your Razer Blade Stealth.

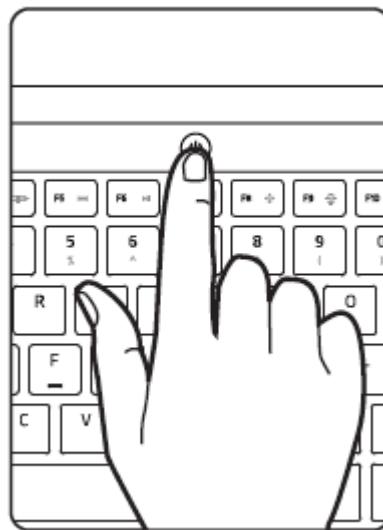


For first time use, please fully charge your Razer Blade Stealth or connect it to a power outlet before turning it on. It takes approximately 3 hours to fully charge the Razer Blade Stealth.


CONNECTING TO THE INTERNET

Disclaimer: The screens shown are subject to change based on the current version of your Operating System.


1. Click the wireless network icon () to bring up the Wireless network list. The system will automatically search for wireless networks in range.

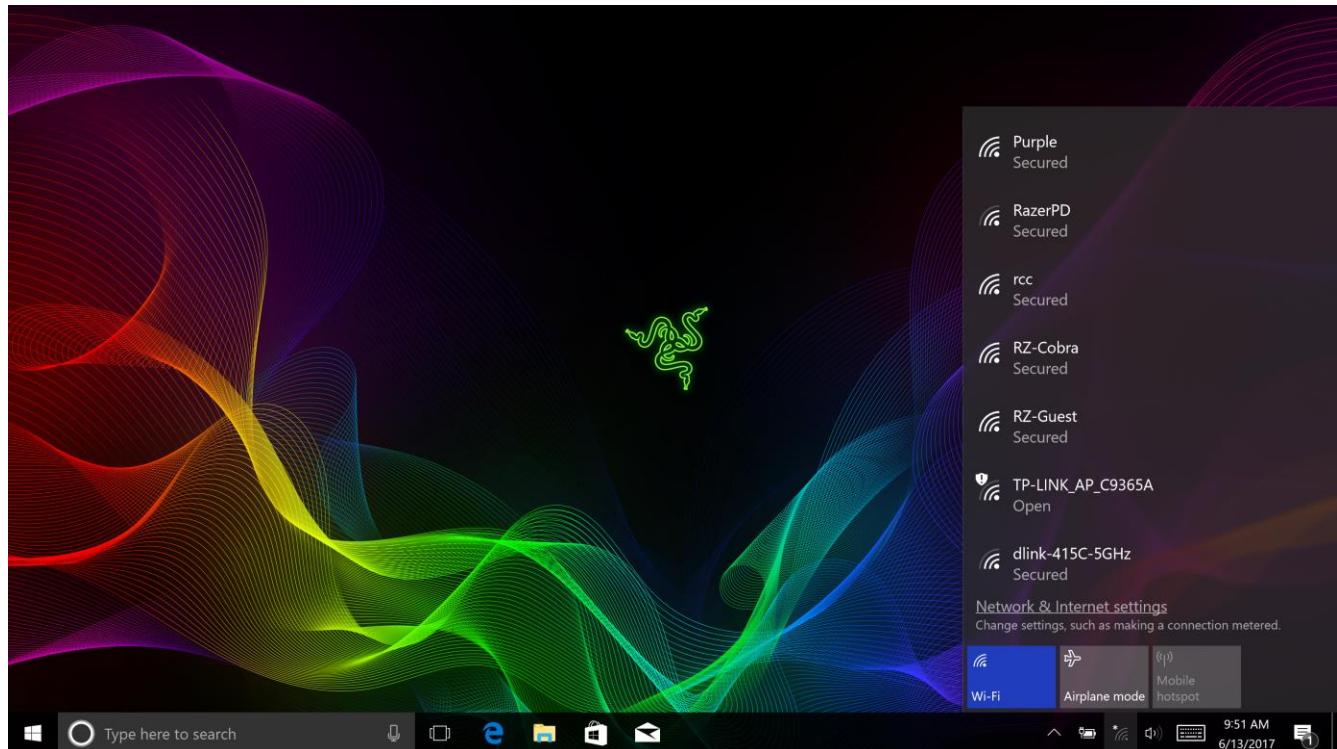

2. Click the network you wish to connect to and click **Connect**.

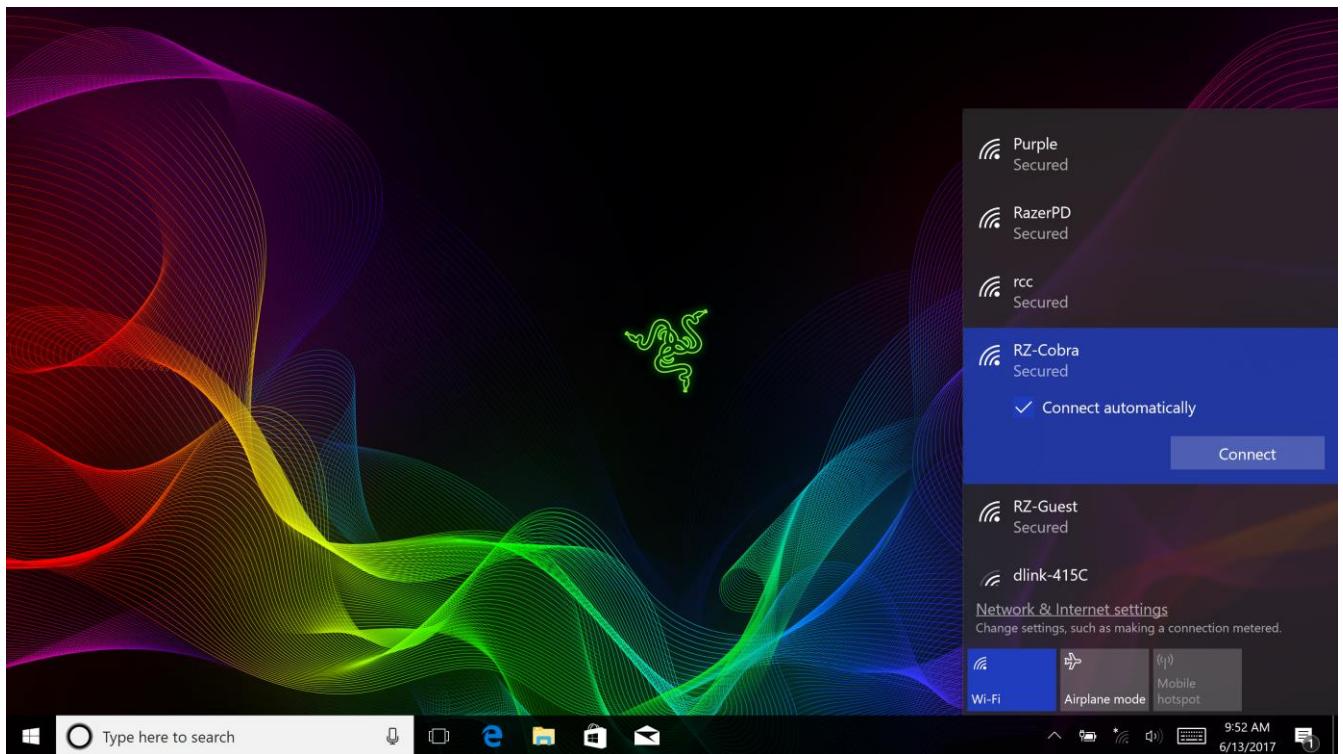


3. Enter the network password (if any) and select whether to enable network sharing. Click **Next**.

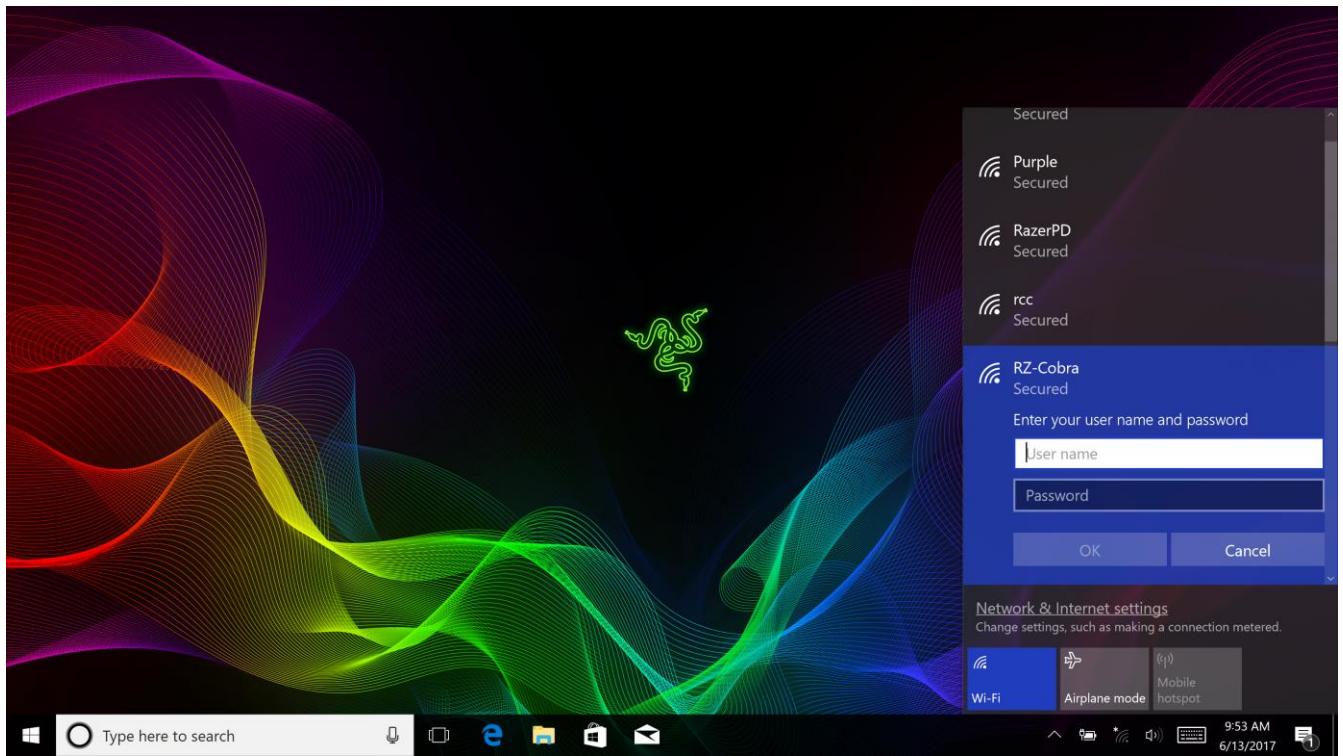

4. Once you are connected to the wireless network, click anywhere outside the window to return to the desktop.

RAZER SYNAPSE ACCOUNT CREATION & INSTALLATION


Razer Synapse allows you to sync your Razer Blade Stealth and other supported Razer peripherals to a cloud server to download driver and firmware updates. You will also be able to configure the Switchblade User Interface, key bindings, profiles, macros, backlighting and more within the application. In addition, Razer Synapse will allow you to immediately register your product and get real-time information on your product's warranty status. All your custom settings will be stored in the cloud too.

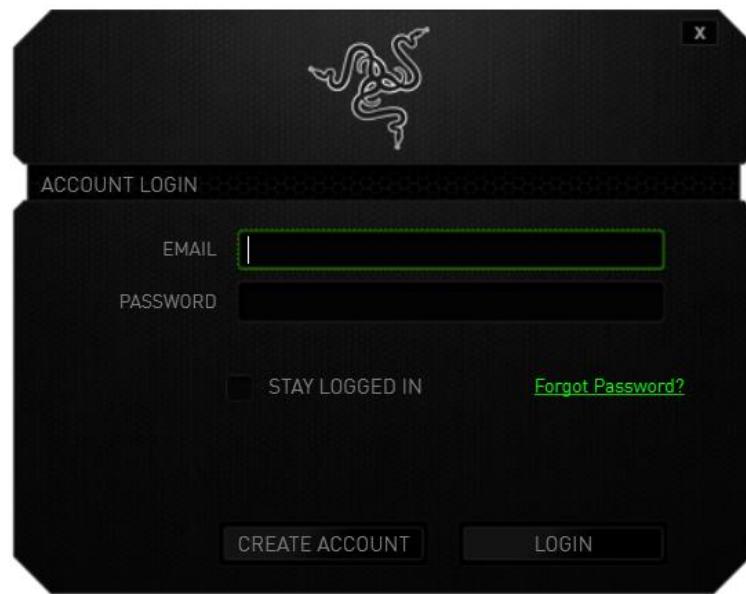

1. Razer Synapse will start automatically once you enter Windows 10.
2. Register for a Razer ID and confirm your new account.
3. Open Razer Synapse and login to your account.
4. Wait until Synapse automatically downloads and installs the necessary drivers.

4. USING YOUR RAZER BLADE STEALTH

STATUS INDICATORS

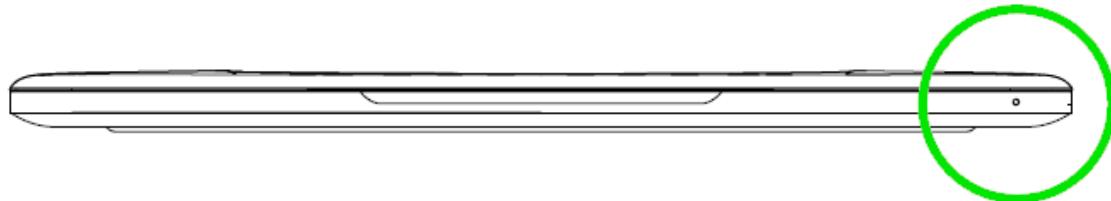

	Sleep	On	Low battery (10% left)	Low battery (3% left)
Front LED indicator				

KEYBOARD FUNCTION KEYS



Pressing the “FN” key in combination with the function keys will activate their secondary functions.


Function key	Secondary function description
	The audio volume controls allow you to mute () , decrease () and increase () the audio output.
	Toggles the monitor output.
	The media keys allow you to play/pause () the current track, return to the previous track () or skip to the next track () .
	The screen brightness keys allow you to decrease () or increase () the brightness of the Razer Blade’s screen.
	The LED control keys allow you to decrease () or increase () the brightness of your keyboard’s LEDs.

5. CONFIGURING YOUR RAZER BLADE STEALTH

Disclaimer: The features listed here require you to log in to Razer Synapse. These features are also subject to change based on the current software version and your Operating System.


SYSTEM TAB

The System Tab is your default tab when you first install Razer Synapse. This tab allows you to customize your device's profiles and key assignments.

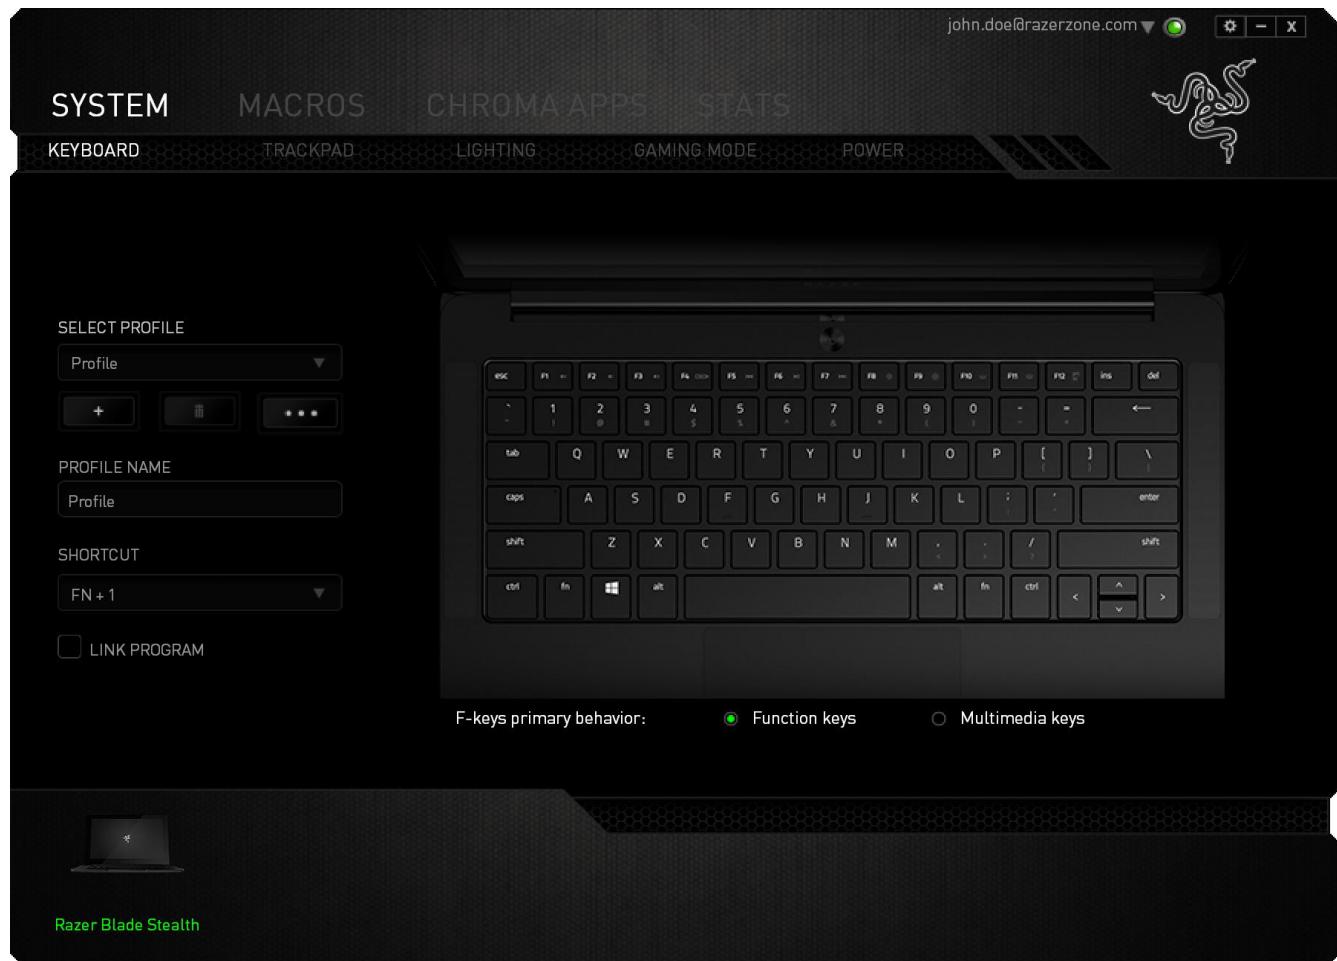

Profile

A profile is a convenient way of organizing all your custom settings and you can have an infinite number of profiles at your disposal. Any changes made within each tab are automatically saved to the current profile and stored into the cloud servers.

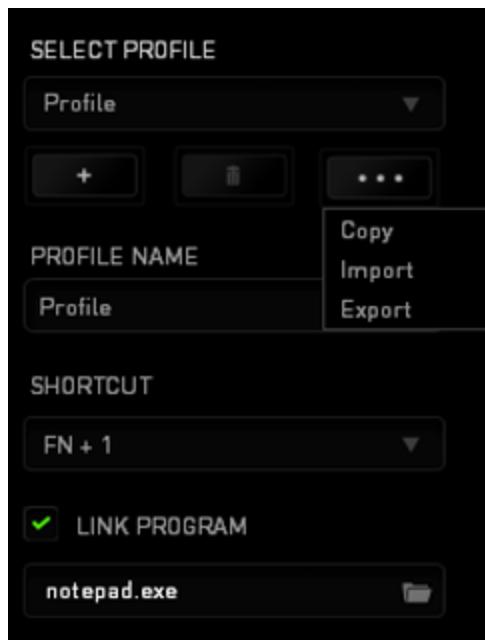


You can create a new profile by clicking the button or delete the current profile by clicking the button. The button allows you to Copy, Import, and Export profiles. Your current profile by default is named “Profile” however; you can rename it by typing on the text field below *PROFILE NAME*.

Each profile can be set to *FN + 0 - 9* using the *SHORTCUT* dropdown menu for fast profile switching. Each profile can also be set to automatically activate when you run a program or application through the use of the *LINK PROGRAM* option.

Keyboard Tab

The Keyboard Tab is where you can modify the basic functionalities of your device such as key assignments and trackpad sensitivity to suit your gaming needs. The changes made in this tab are automatically saved to your current profile.

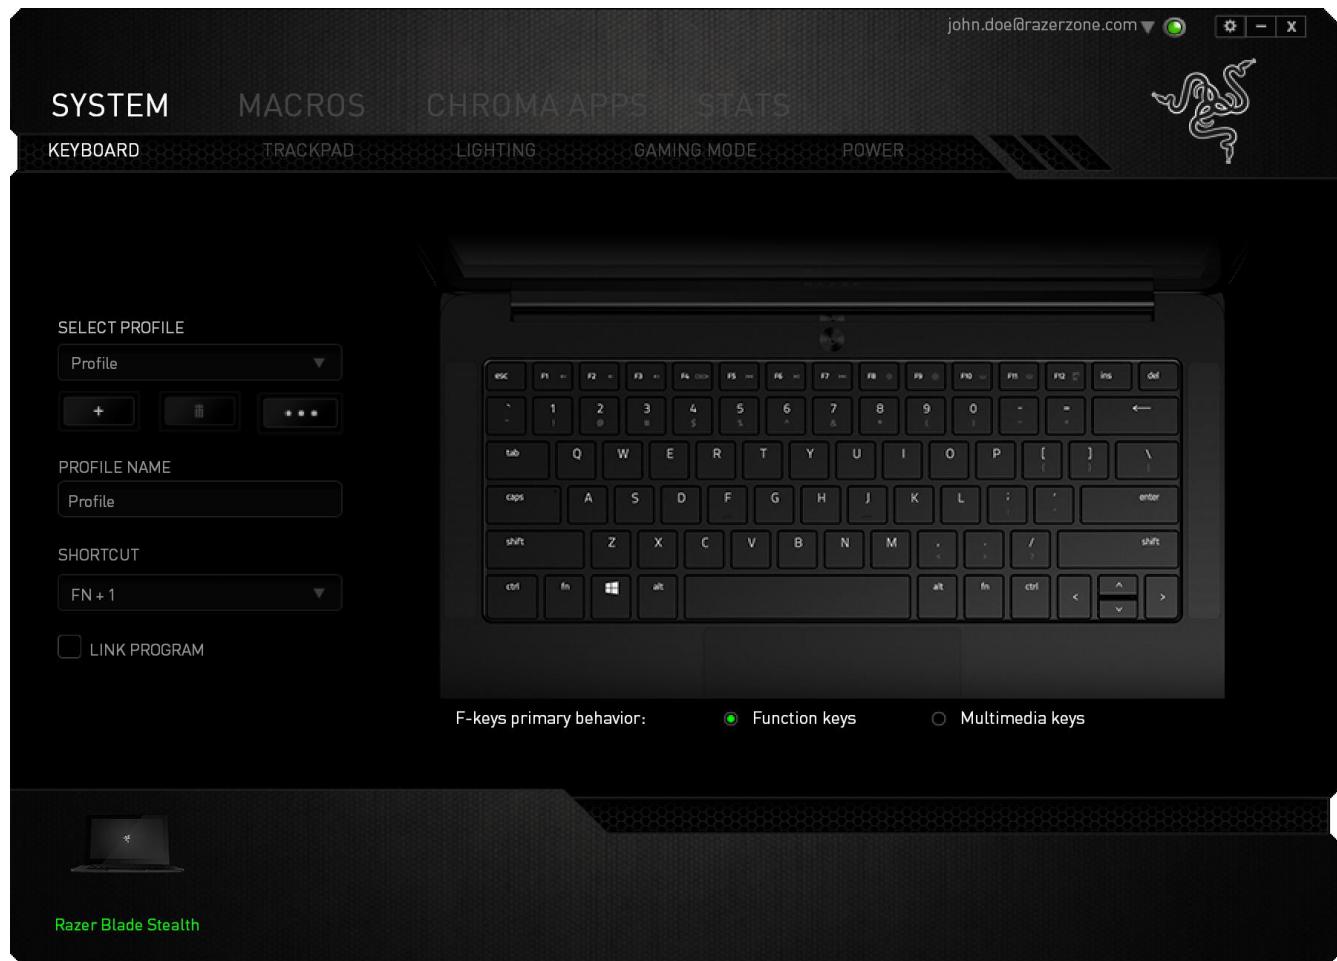

Key Assignment Menu

Initially, each key is set to *DEFAULT*. However, you may change the function of this key by clicking the desired key to access the Key Assignment Menu.



Listed below are the customization options and their description.



Default

This option enables you to return the key to its original function. To choose the *DEFAULT*, simple select it from the Key Assignment Menu.



Keyboard Function

This option enables you to change any key into another keyboard function. To choose a keyboard function, select *KEYBOARD FUNCTION* from the Key Assignment Menu and enter the key you wish to use on the given field below. You may also include modifier keys such as *Ctrl*, *Shift*, *Alt* or any of those combinations.



Mouse Function

This option allows you to change any key into a mouse button function. To choose a mouse function, select *MOUSE FUNCTION* from the Key Assignment Menu and an *ASSIGN BUTTON* submenu will appear.

Listed below are the functions which you can choose from the Assign Button submenu:

- | | |
|----------------|--|
| Left Click | - Performs a left mouse click using the assigned button. |
| Right Click | - Performs a right mouse click using the assigned button. |
| Scroll Click | - Activates the universal scrolling function. |
| Double Click | - Performs a double left click using the assigned button. |
| Mouse Button 4 | - Performs a “Backward” command for most internet browsers. |
| Mouse Button 5 | - Performs a “Forward” command for most internet browsers. |
| Scroll Up | - Performs a “Scroll Up” command using the assigned button. |
| Scroll Down | - Performs a “Scroll Down” command using the assigned button. |
| Scroll Left | - Performs a “Scroll Left” command using the assigned button. |
| Scroll Right | - Performs a “Scroll Right” command using the assigned button. |



Inter-device

Inter-device allows you to change the functionality of other Razer Synapse-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse. When you select Inter-device from the Key Assignment Menu, a sub-menu will appear.

DEVICE TO LINK allows you to choose which currently connected Razer device can be linked while *FUNCTION* allows you to choose which functionality you want to use for the linked device.



Macro

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting a key to Macro, you can conveniently execute a chain of commands. When you select this option from the Key Assignment Menu, a submenu will appear which allows you to choose a prerecorded macro command. See the **MACROS TAB** to learn more about creating Macro commands.



Switch Profile

The Switch Profile enables you to change profiles on the fly and immediately load all your pre-configured settings. When you select Switch Profile from the Key Assignment Menu, a sub-menu will appear that will allow you to choose which profile to use. An on-screen display will automatically appear whenever you switch profiles.



Launch Program

Launch Program allows you to launch a program or a website using the assigned key. When you select Launch Program from the Key Assignment Menu, two options will appear which allow you to search for the specific program you want to open or write the address of the website you want to visit.



Multimedia Function

This option allows you to bind multimedia playback controls to your device. After selecting Multimedia Function, a submenu will appear. Listed below are the multimedia playback controls you can choose from the submenu:

- | | |
|-----------------|---|
| Volume Down | - Decreases the audio output. |
| Volume Up | - Increases the audio output. |
| Mute Volume | - Mutes the audio. |
| Mic Volume Up | - Increases the microphone volume. |
| Mic Volume Down | - Decreases the microphone volume. |
| Mute Mic | - Mutes the microphone. |
| Mute All | - Mute both microphone and audio output. |
| Play / Pause | - Play, pause, or resume playback of the current media. |
| Previous Track | - Play the previous track. |
| Next Track | - Play the next track. |



Windows 8 Charms

This option enables you to assign the key into an Operating System shortcut command. For more information please visit: <http://windows.microsoft.com/en-us/windows-8/getting-around-tutorial>



Windows Shortcuts

This option enables you to assign the key into an Operating System shortcut command. For more information please visit: <http://support.microsoft.com/kb/126449>




Disable

This option renders the assigned key unusable. Use Disable if you do not want to use the key or if it interferes with your gaming.

Trackpad Configuration

You can adjust the response of the trackpad and change the gestures by clicking the links on the user interface.

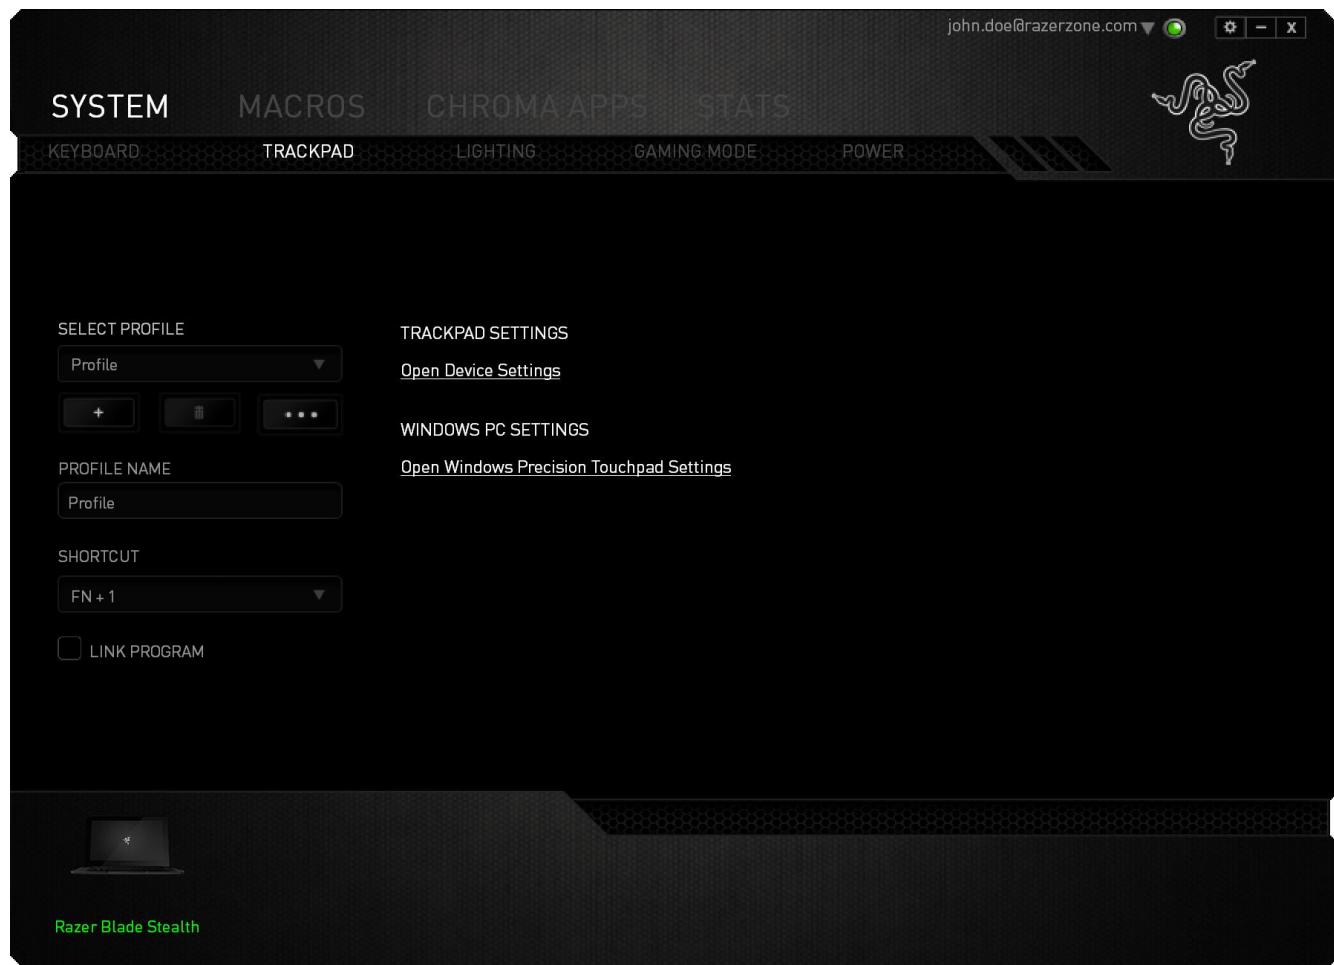

Listed below are the options and their descriptions.

Trackpad Settings


Use this link to select your primary button, set the scroll behavior, and change the touchpad delay.

Windows PC Settings

Use this link to edit gestures, cursor pointing options, and other advance features.

Lighting Tab

The Lighting Tab is where you can customize the color of the lighting of individual keys or select pre-loaded lighting effects to be applied to the entire keyboard. You can also adjust the brightness of the keyboard lighting when plugged in or running on battery. Changes made in this tab will be automatically saved to the current profile.

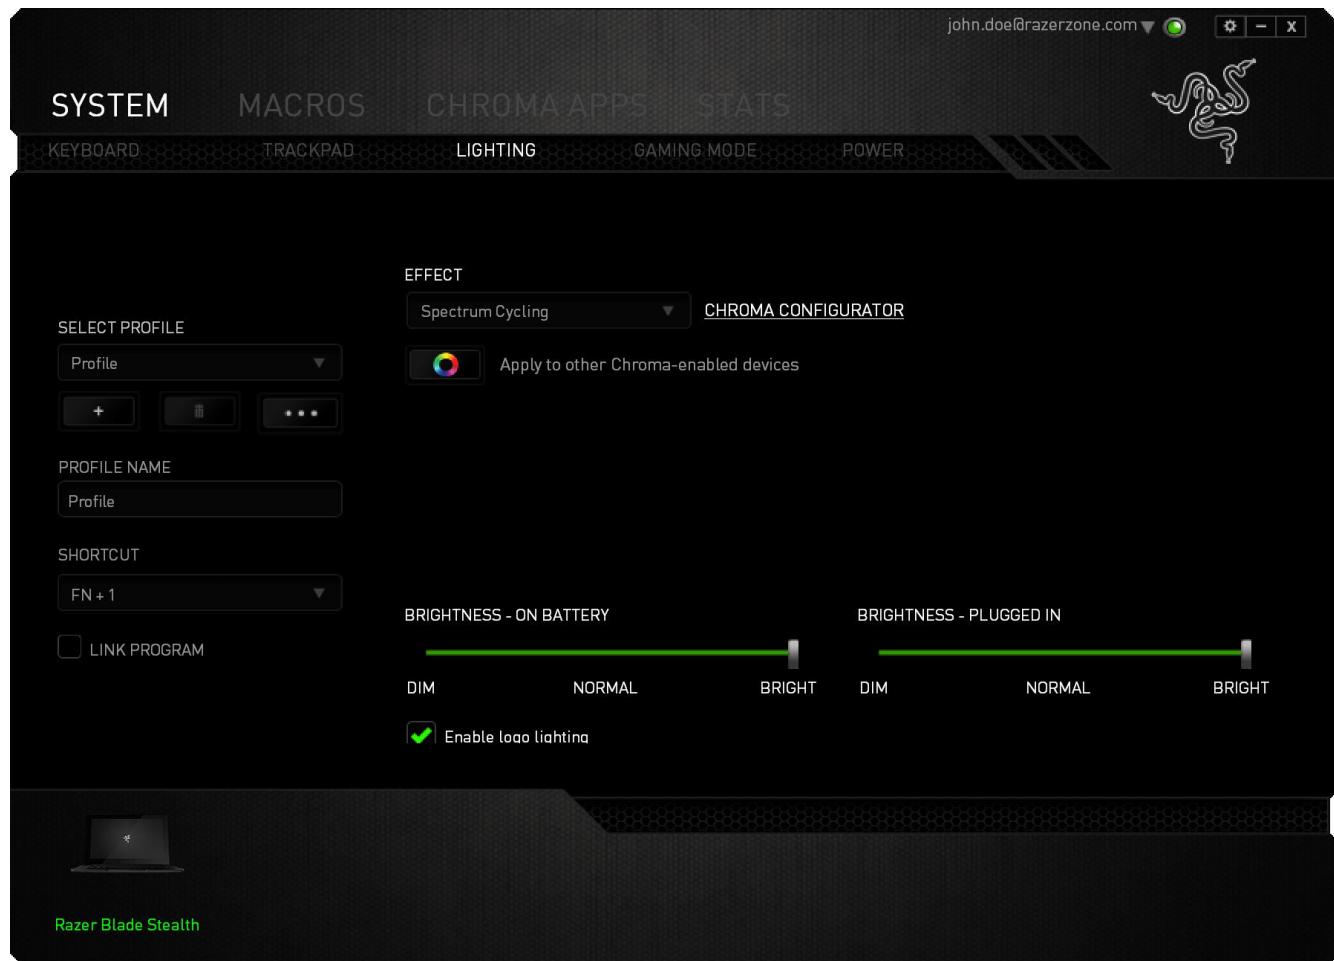

Pre-loaded lighting effects


A number of pre-loaded lighting effects can be selected and applied to your keyboard lighting as a whole, such as spectrum lighting, breathing etc. The default effect is spectrum lighting. Select your desired effect and their corresponding properties (such as color) from the bottom area of this tab.

	Name	Description	How to set up
	Spectrum cycling	The lighting on the keyboard will cycle between 16.8 million colors indefinitely	Default effect. No further customization required
	Wave	The keyboard lighting will scroll in the direction selected with a default spectrum of colors	Select either left-to-right or right-to-left wave direction
	Static	The keyboard will remain lit in the selected color	Select the desired lighting color
	Breathing	The keyboard lighting fades in and out of the selected color(s)	Select up to 2 colors for this setting
	Reactive	Keys on the keyboard will light up in the selected color when pressed. The lit key will fade off after a specified period of time.	Select the color of the keys and the length of time for the key to remain lit.
	Ripple	The keyboard lighting ripples on key press, centered around the pressed key. Each ripple spreads across the entire keyboard once.	Select the initial ripple color.

Advanced lighting configuration

Accessible from Razer Synapse, is an advanced Chroma configurator for your Chroma-enabled device. Click the link from the **Lighting** tab to open this configurator.

- 1) Select the zones on the keyboard to customize. You can select multiple regions with the CTRL key.
- 2) Add an Effect layer for the selected region.
- 3) Customize the effects using the various options.
- 4) Click the **APPLY** button to save and apply all configurations to your mouse mat.

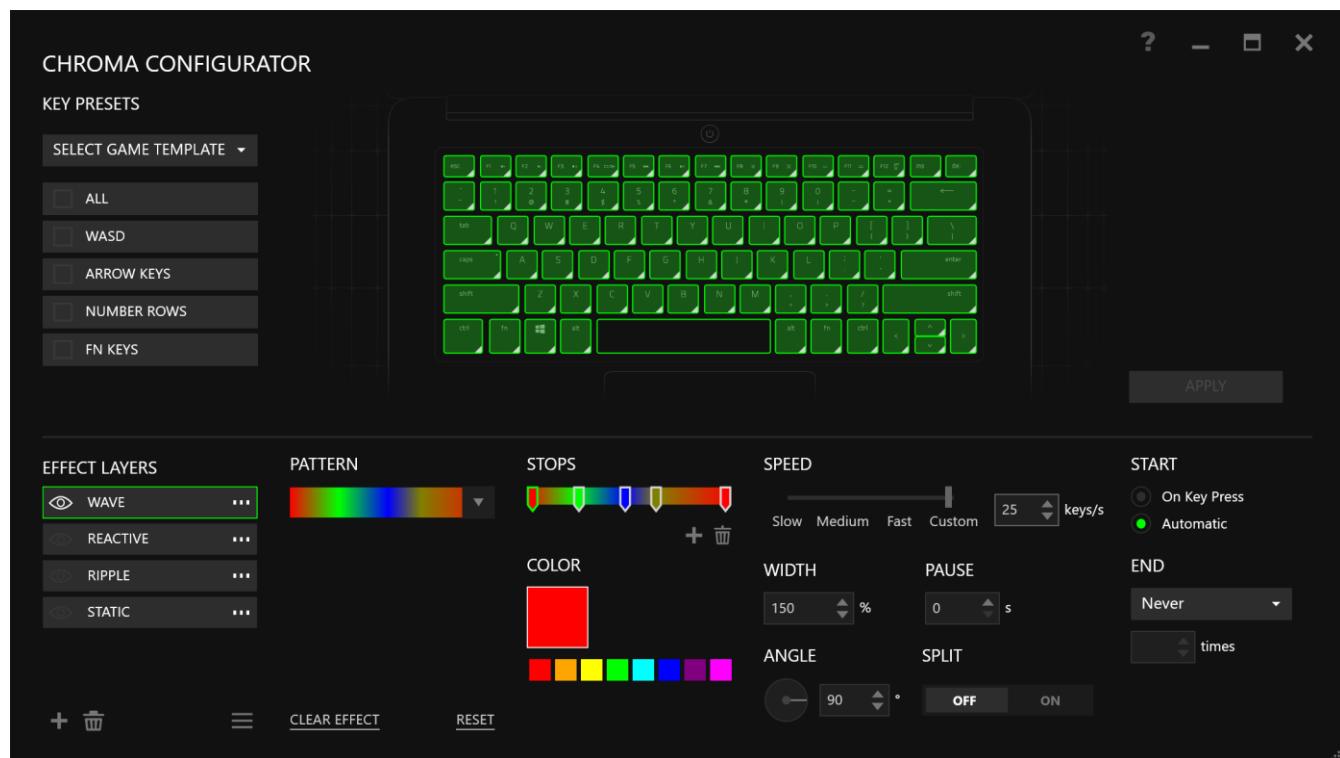


Customized lighting effects

You can also select the lighting color for each key individually. Select the **Effect** "Custom" and select the key to change. Then pick a color using the color picker.

The "Custom" option also includes templates for various game genres such as FPS, MOBA, MMO and RTS etc.


Gaming Mode Tab

The Gaming Mode Tab helps you prevent accidental key presses. Depending on your settings, you may choose to disable the Windows key, Alt + Tab and Alt + F4. Furthermore, you can maximize the effect of Anti-Ghosting by activating the Gaming mode function.

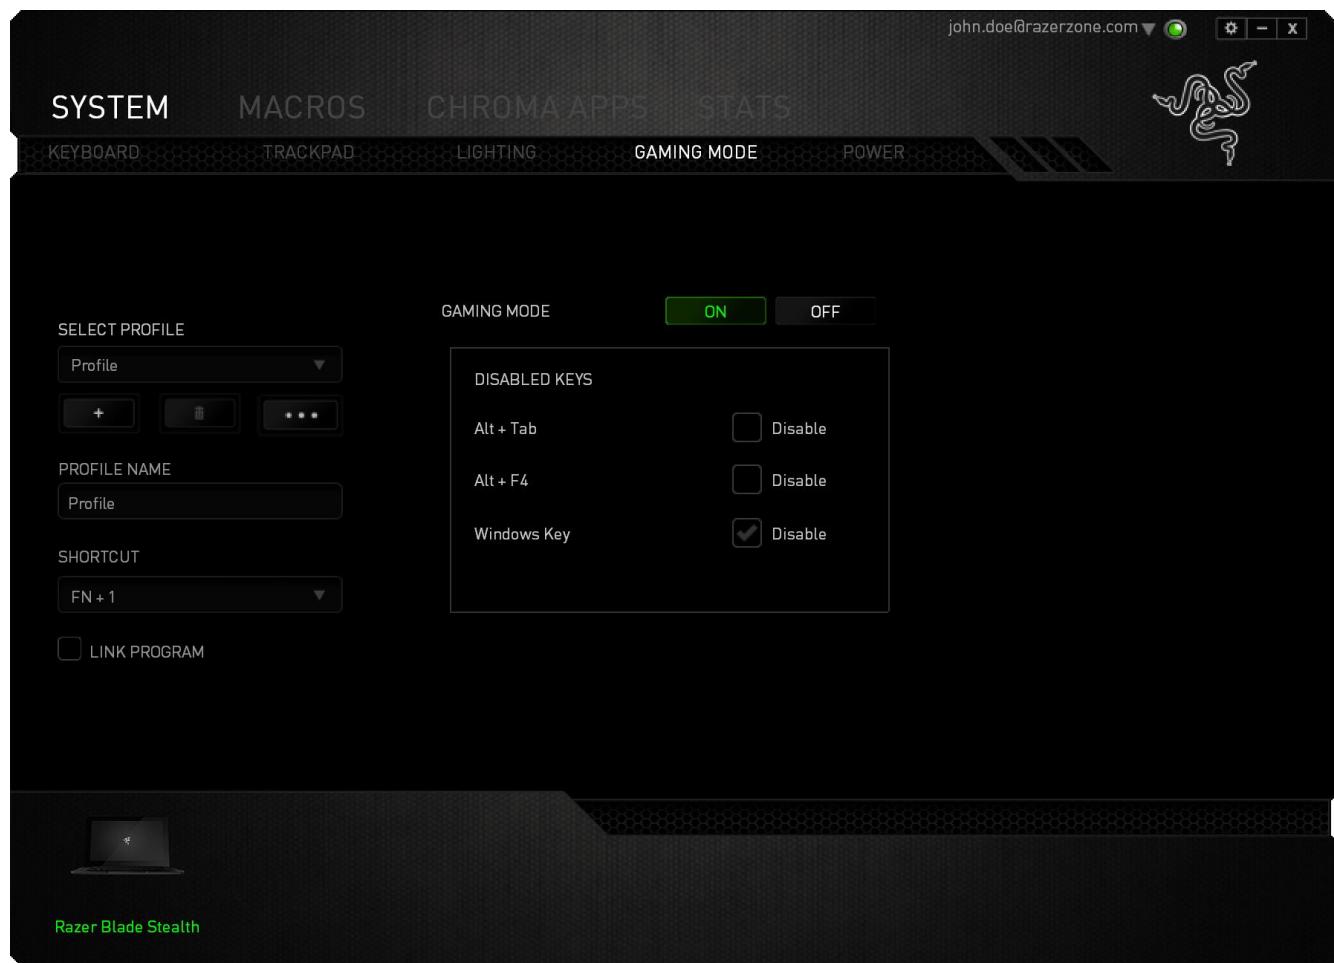


Power Tab

The Power Tab allows you to manage your device's energy consumption when running on batteries. You can also set your device to enter sleep mode when it has been idle for a certain amount of time.

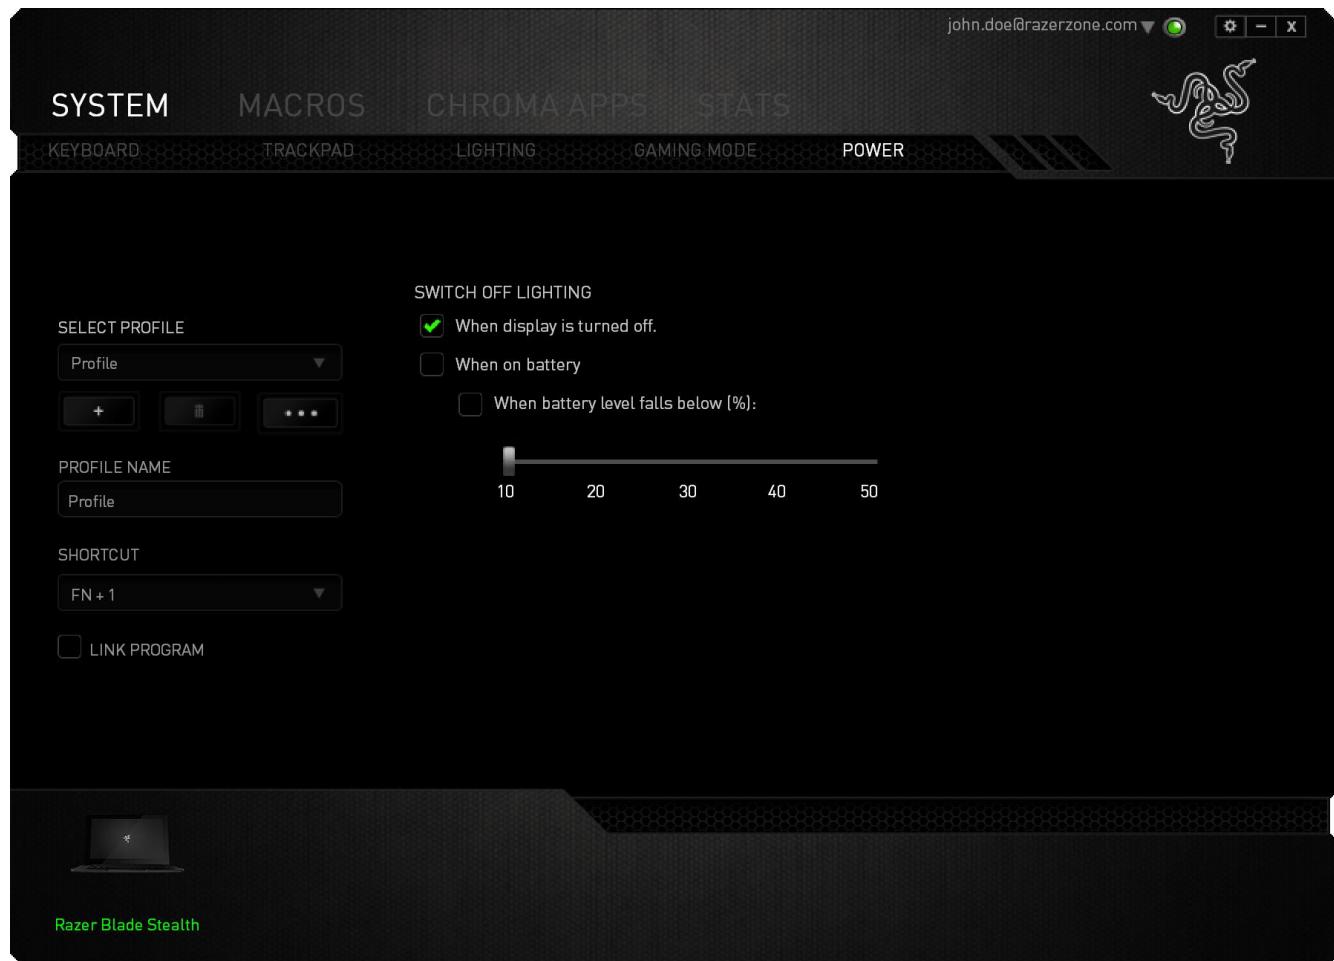

MACROS TAB

The Macros Tab allows you to create a series of precise keystrokes and button presses. This tab also allows you to have numerous macros and extremely long macro commands at your disposal.

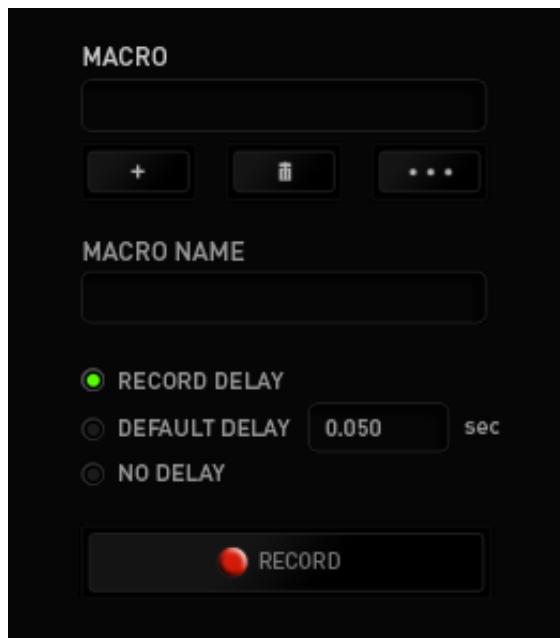

The Macro section works similarly to Profile wherein you can rename a macro by typing on the field below *MACRO NAME*. There are also other options available in the macro section such as creating a new macro by clicking the button and deleting the current macro by clicking the button. The button allows you to Copy, Import, and Export macros.

To create a macro command, simply click the button and all your keystrokes and button presses will automatically register on the macro screen. When you are done recording your macro commands, click on the button to end the session.

The Macro section allows you to input the delay in-between commands. In *RECORD DELAY* the delay in-between commands are registered as how it is entered. The *DEFAULT DELAY* uses a predefined time (expressed in seconds) as the delay. And *NO DELAY* omits all the pauses in-between keystrokes and button presses.



Note: You may use up to three decimal places when inserting values on the seconds (sec) field.


Once you have recorded a macro, you may edit the commands you have entered by selecting each command on the macro screen. Each keystroke or button press is arranged sequentially with the first command shown at the top of the screen.




The button allows you to edit a particular command and the button enables you to delete a command. The and buttons give you the option to move the command up or down.


The button allows you to put in additional keystrokes, button presses or time delays either before or after the selected command.

Once you have pressed the **INSERT** button, a new display window will appear beside the list of macro commands. The dropdown menu on this window allows you to choose a keystroke or a delay to be added in before or after the highlighted macro command.

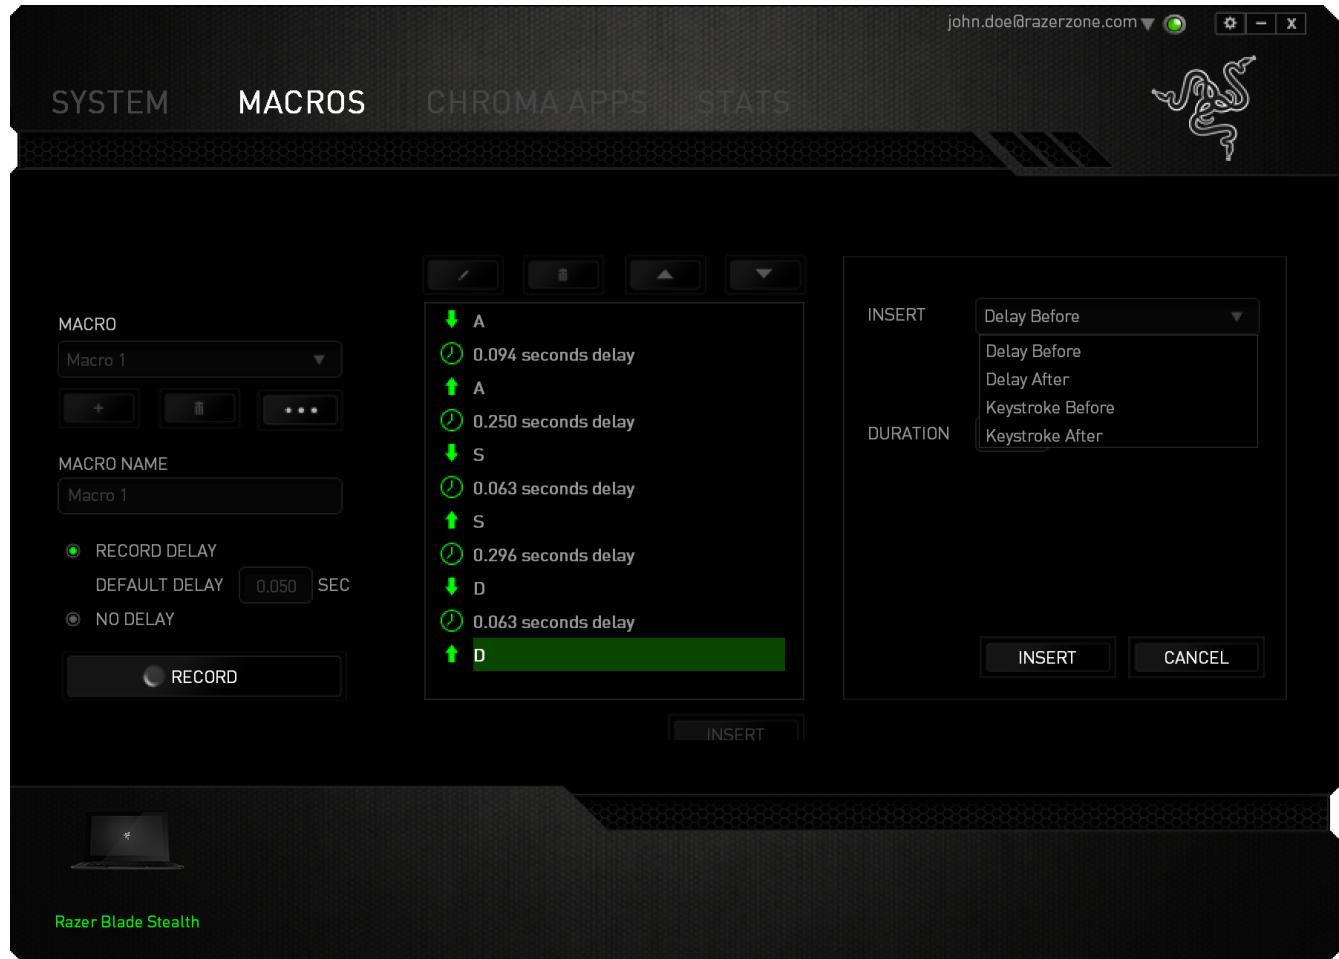

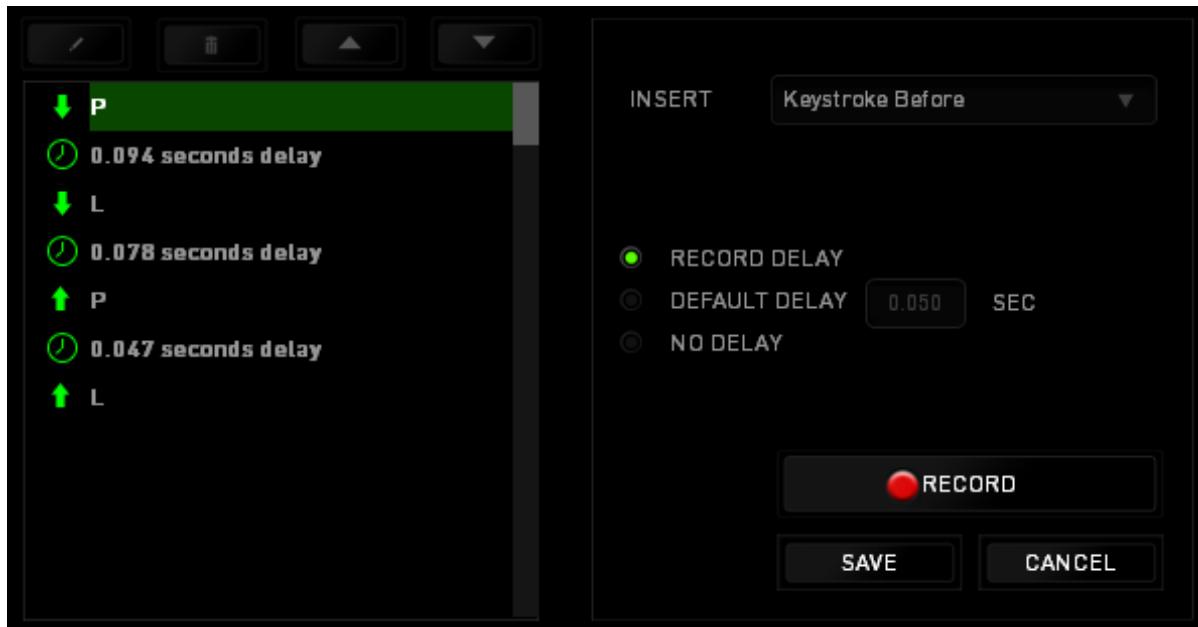

You may add in a new set of macro commands by clicking the **RECORD** button on the keystroke menu; or input time delays on the duration field using the delay menu.

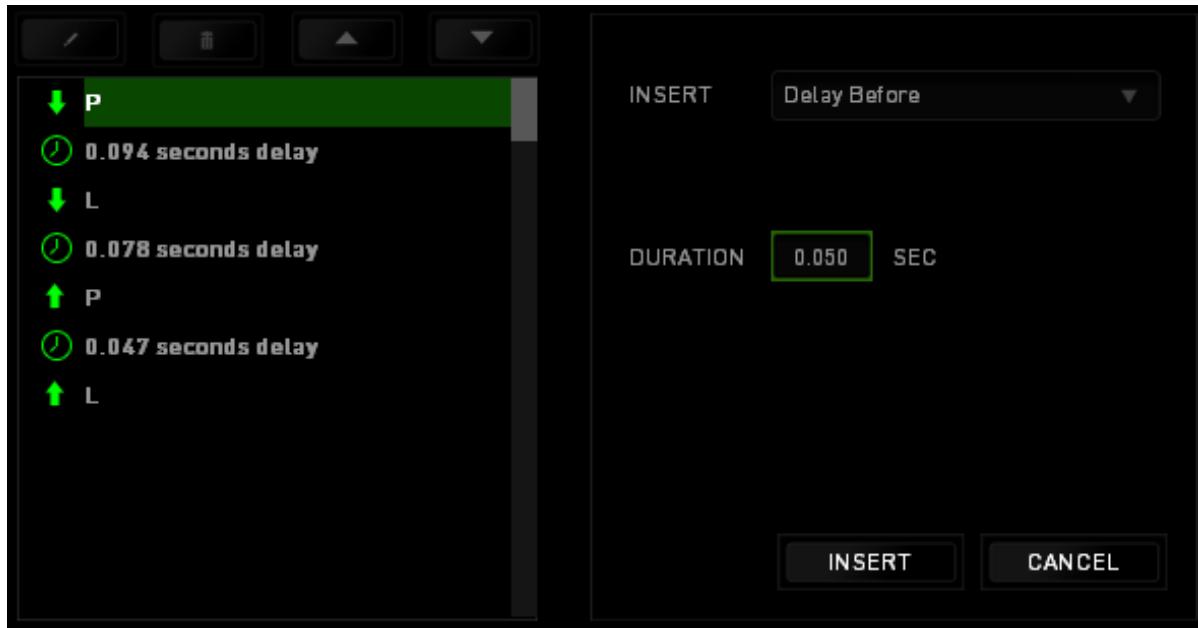


CHROMA APPS TAB

The Chroma Apps Tab allows 3rd party apps to access your Chroma-enabled devices and unlock additional features when using particular games or applications.


Settings Tab

To enable the Chroma Apps function, click **ON** and visit razerzone.com/chroma-workshop to download an app.

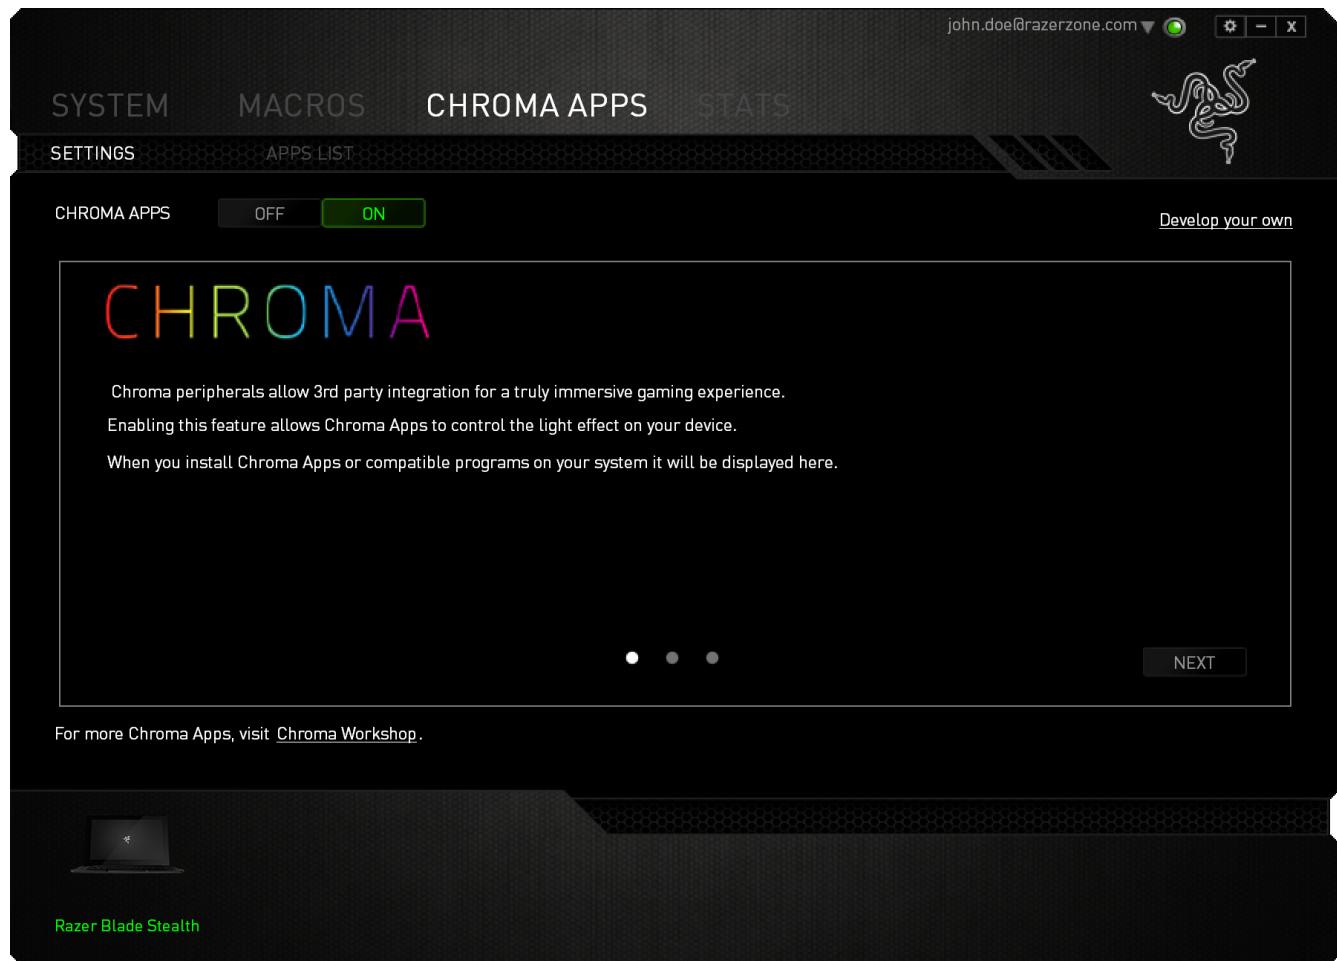


Apps List Tab

The Apps list is where all your Chroma apps are listed. From this tab you can view additional information regarding a particular Chroma app by double-clicking it on the list or selecting the Chroma app and clicking . You can also rearrange the list using drag-and-drop or by clicking  and .

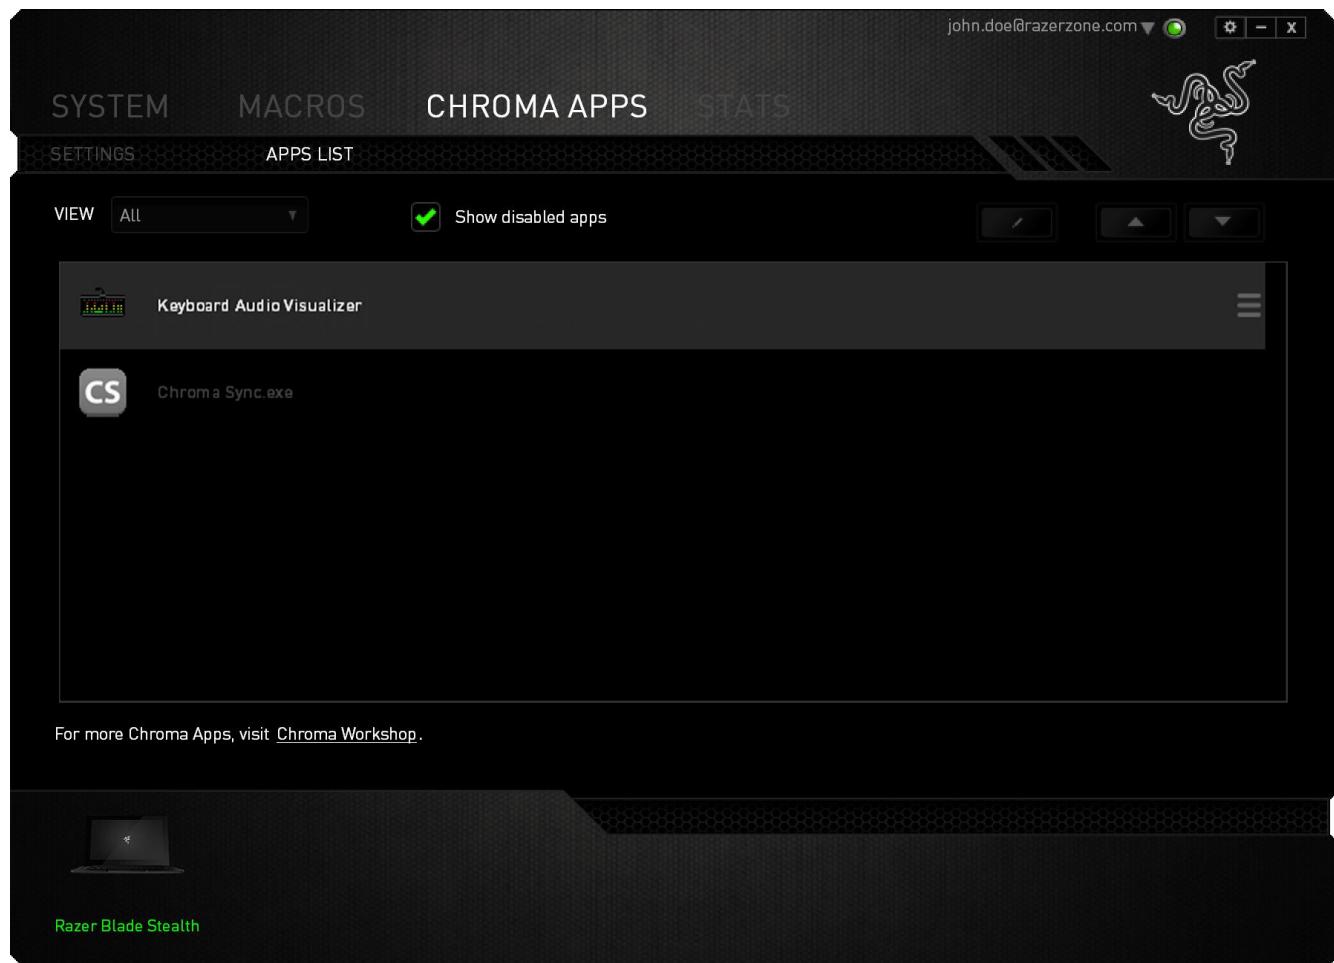

To disable a Chroma app, open the additional information window of that app and click **OFF**.

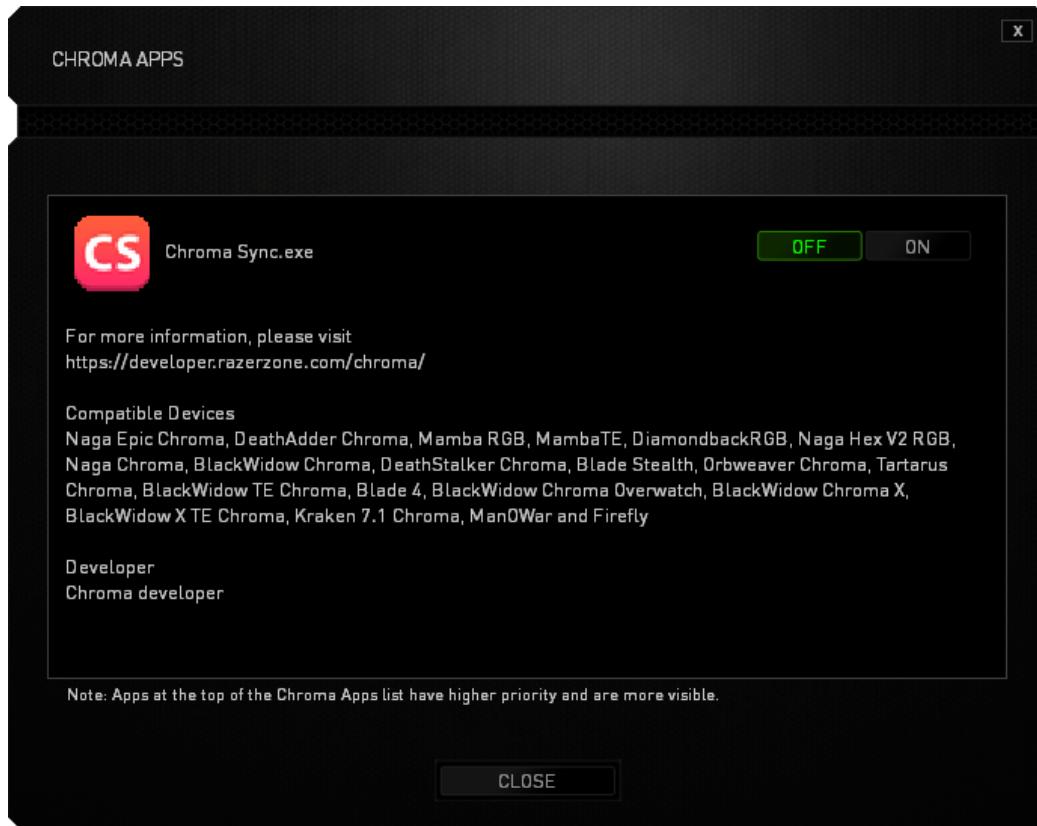


You may also disable the Chroma app by right-clicking on the app from the list and click **Disable '...'**.

STATS & HEATMAPS

Note: The images shown here are for reference only and may differ from the actual device.


Stats & Heatmaps help you analyze your gameplay by tracking your in-game mouse clicks, mouse movement and keyboard usage and visualizing it in form of heatmap overlays. This function is disabled by default. To enable this function, click the notification icon next to your user name in the Razer Synapse window and select “Enable Stats & Heatmaps”.

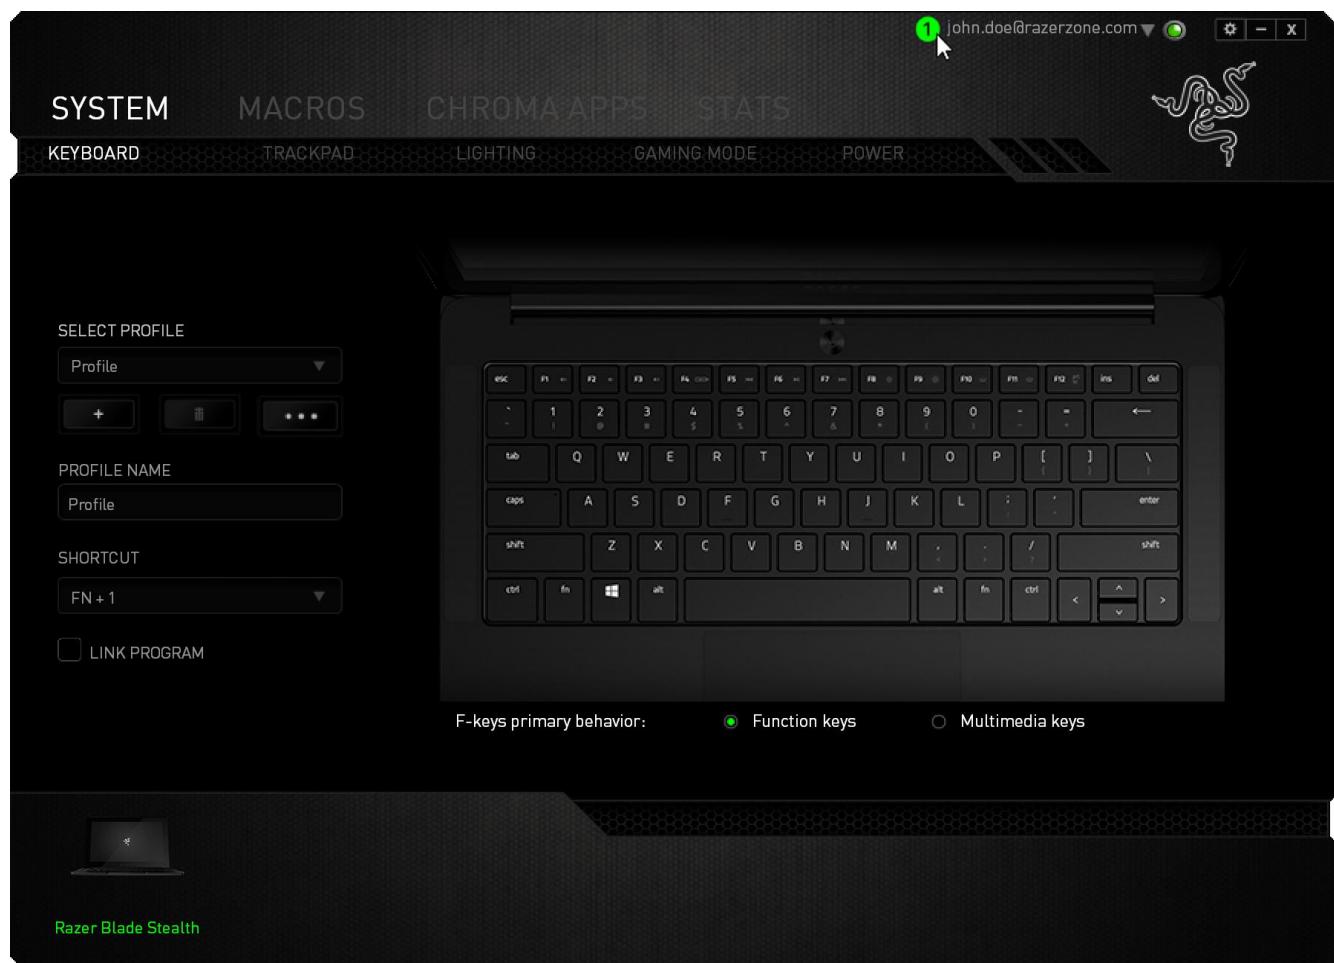

Confirm to enable the function in the dialog box that appears. Return to Razer Synapse and a new “Stats” tab will be available. Simply click the tab to open the function window.

Games List


Stats & Heatmaps work by tracking the usage of all supported devices for each game. When the feature is enabled, it automatically scans your system for installed games and adds them to the Games List located on the left side of the screen. Click  to show or hide the Games List.

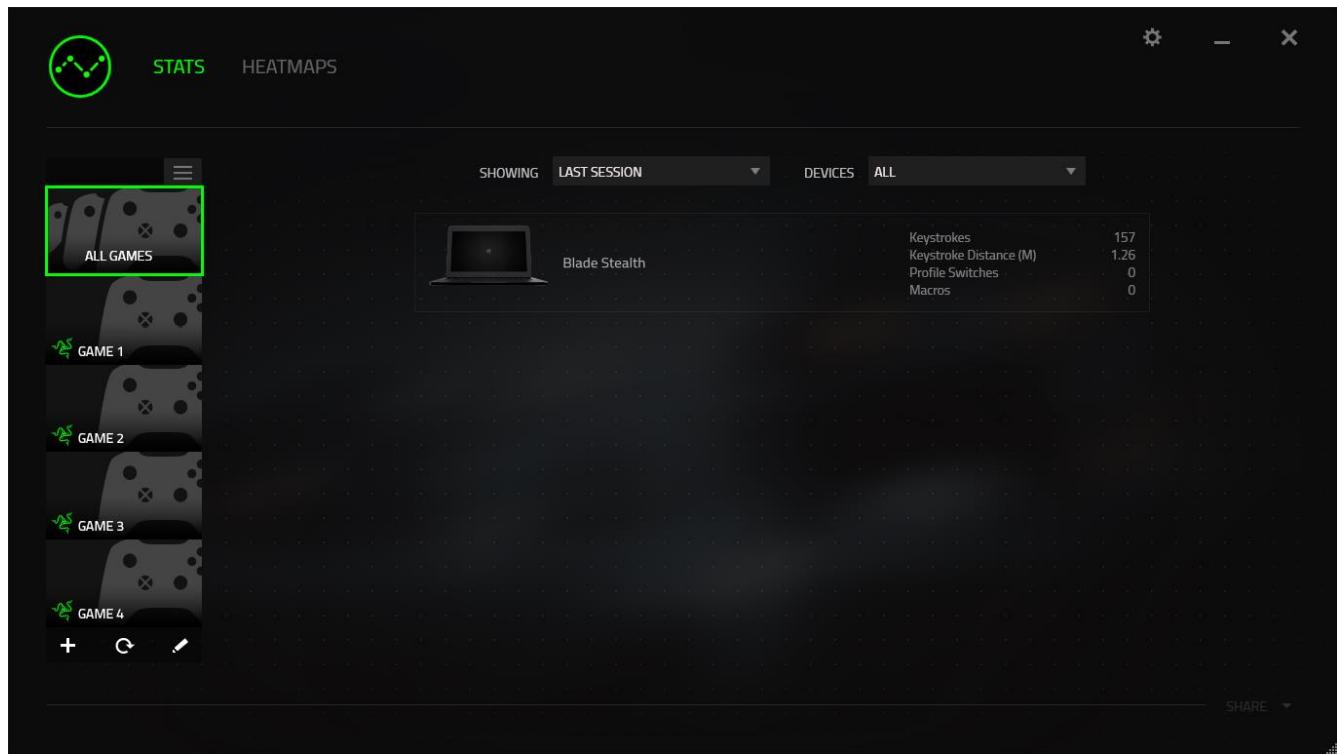

From this list, you can add more games that have not been automatically detected, using the  button, edit games with the  button or re-scan your system with the  button to search for newly installed games.


Stats Tab

By default, the Stats Tab shows you the overall statistics of all your Razer devices for all games and all time. You can select a specific game via the game list on the left side, change the time period using the *SHOWING* dropdown menu, or the Razer device using the *DEVICES* dropdown menu.

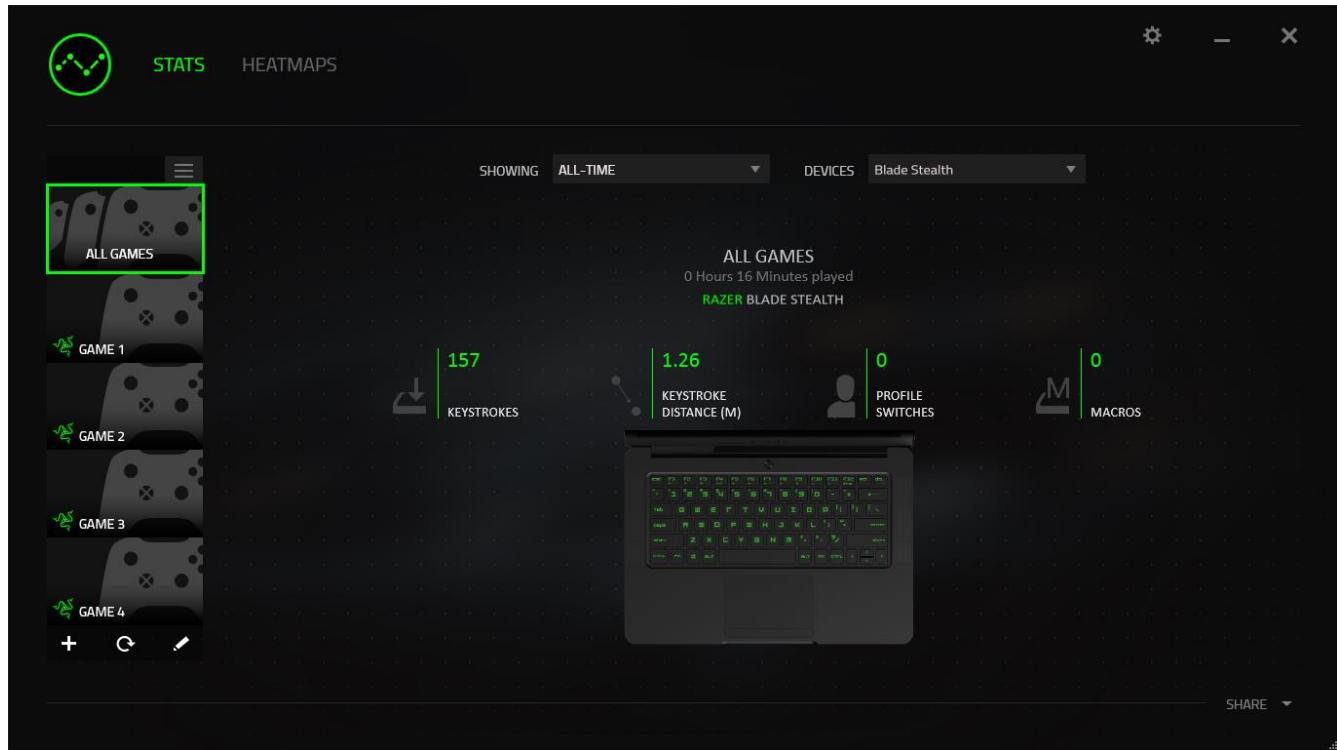

Heatmaps Tab - Keyboard


Heatmaps Tab shows the most frequently used keys on your Razer device for each game on your Games List.

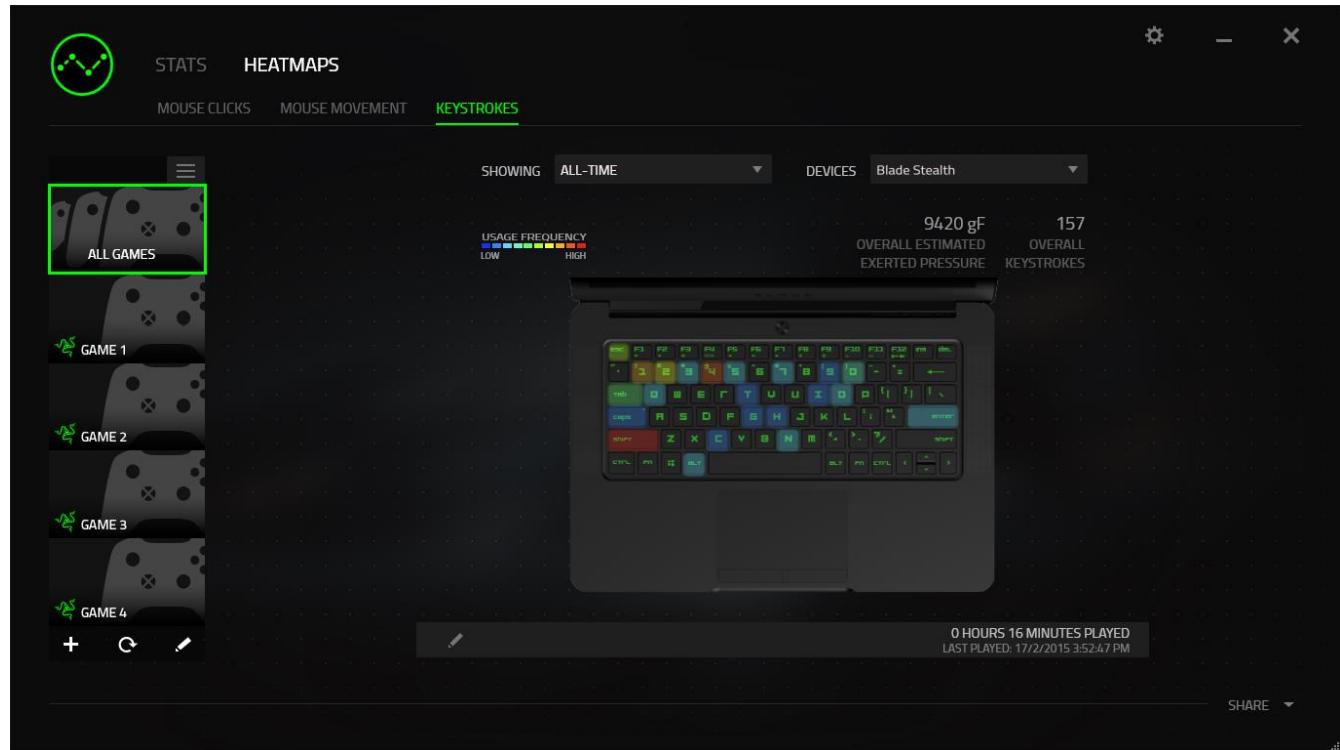

Social Media


You can share your heatmap image on social media networks such as Facebook or Twitter directly from Razer Synapse.

From the **Heatmaps** tab, click the **Share** button on the bottom right of the screen. You will be prompted to login to the selected social media using an existing account if you have not already done so.

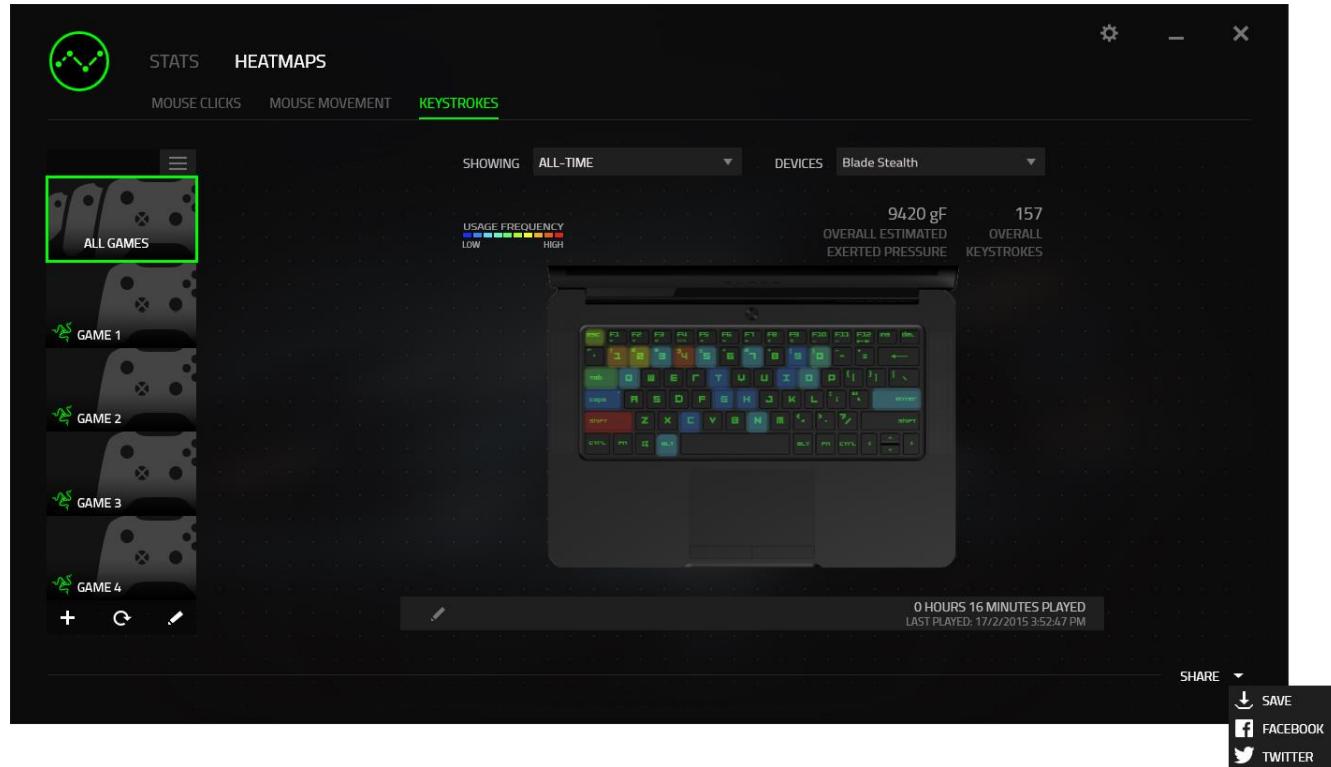

You can also login to your social media accounts first from the “SETTINGS” screen.

From the Stats & Heatmaps window, click . Select the “ACCOUNTS” tab. Click **CONNECT** next to the social media network you wish to sync with. Enter your login details and wait for the connection to complete.

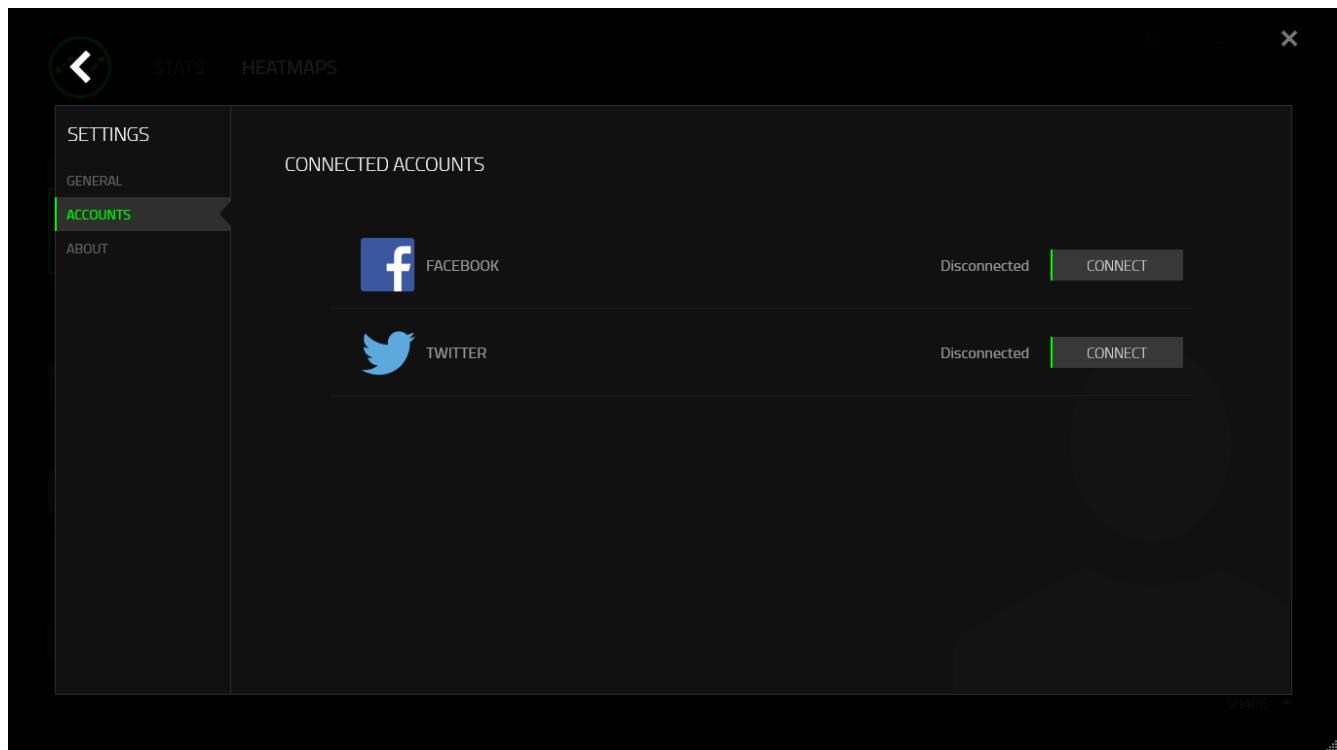

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Blade Stealth, we suggest that you adopt the following guidelines:

1. Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to www.razersupport.com for support. Do not attempt to service or fix the device yourself at any time.
3. Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.
4. Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Blade Stealth.

1. Position your laptop directly in front of you. If you have an external mouse, position it next to the laptop. Place your elbows next to your side, not too far away and your mouse within easy reach.
2. Adjust the height of your chair and table so that the laptop is at or below elbow height.
3. Keep your feet well supported, posture straight and your shoulders relaxed.

4. During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods. When using an external mouse, use a wrist rest to support your wrist while gaming.
6. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.
7. If you should experience any physical discomfort while using your laptop, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

BATTERY

The Razer Blade Stealth contains an internal, lithium-ion polymer rechargeable battery. In general, the life expectancy of such batteries is dependent upon usage. Heavy daily usage will result in shorter battery life. Casual use will extend battery life. If you suspect that the lithium-ion rechargeable battery inside the Razer Blade Stealth may be drained (has a low charge), try charging it. If the battery does not recharge after several attempts, it may be non-operational. Dispose of batteries according to your local environmental laws and guidelines.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

© 2016 Razer Inc. All rights reserved. Razer, For Gamers. By Gamers, and the triple-headed snake logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Manufactured under license from Dolby Laboratories.

Dolby, Dolby Home Theater and the double-D symbol are trademarks of Dolby Laboratories.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Blade Stealth (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit

www.razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FCC DECLARATION OF CONFORMANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on www.razerzone.com.

FCC CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

USAGE RESTRICTIONS

This Razer device was developed and designed to comply with the various wireless and telecom agency requirements throughout the world. This ensures that the device do not cause any harm to Public Switching Telecommunication Networks (PSTN) and do not violate any power and frequency spectrum allocations on a country by country basis. This device was also designed to be compliant with regulatory agency limits for Electromagnetic Compatibility (EMC).

IMPORTANT NOTICE FOR USE IN HEALTHCARE ENVIRONMENTS

This Razer device is not a medical device and is not listed under UL or IEC 60601 (or equivalent). This device should be kept at a certain distance to avoid harmful effects to patients or medical equipment.

AVIATION USAGE RESTRICTIONS

Certain restrictions apply to this device while on-board an aircraft. Razer encourages you to understand these restrictions to ensure the flight's safety and security.